



A1-ESS-G2 SYSTEM (A1-BI PRO-200-G2)

Installation Guide

Version 3.0

www.solaxpower.com

SolaXCloud App

Scan the QR code below to download SolaXCloud App.



CHANGE HISTORY

Version 03 (2025-04-15)

Added the contact information

Version 02 (2025-03-05)

Updated "3.3 Specification of Backup Interface" (Added 208V grid)

Updated "9.3 Make Communication Connection" (Updated the QR code for BI PRO CT configuration manual)

Version 01 (2024-09-22)

Updated "3.1 Specification of A1-HYB-G2 Inverter" (Added 208V grid)

Version 00 (2024-08-23)

Initial release

Table of Contents

1	About this Manual	1
	1.1 Scope of Validity	1
	1.4 About A1-ESS-G2 System	2
	1.4.2 Solutions	
2	Safety	7
	2.1 General Safety Instructions	7
	2.2 Important Safety Instructions	
3	Specification	11
	3.1 Specification of A1-HYB-G2 Inverter	
	3.3 Specification of Backup Interface	
4	Site Requirements and Pre-installation Guidance	16
	4.1 Physical Requirements	16
	4.2 Dimensions of the System	
	4.3 Installation Space Requirement	
5	4.4 Installation Environment Requirement Preparation before Installation	
5	5.1 Packing List of Inverter	
	5.2 Packing List of Battery	
	5.3 Packing List of Backup Interface	
	5.4 Tools Required	
6	Plan the Installation Site	34
7	Mechanical Installation	37
	7.1 Overview of Installation Schemes	37
	7.2 Installation Methods	46
	7.3 Floor-mounting	48
	7.4 Wall-mounting	
8	Wiring Connection on the Inverter	96
	8.1 Overview of All Flectrical Wiring Methods	96

	8.2 P	ower	Connection	99
	8	.2.1	PV Connection	100
	8	.2.2	Grid Connection	102
	8	.2.3	Battery Connection	104
	8.3 G	iroun	d Connection	106
	8.4 C		nunication Connection	
	8	.4.1	Make Communication Connection to Another Inverter/BI PRO	108
	8	.4.2	Emergency Stop Connection	113
	8		RGM (Meter X) Connection (Optional)	
	8		External Electricity Meter (Meter Y) Connection (Optional)	
	8		RSD Transmitter Connection	
	Ü		Parallel Connection	
			Monitoring Connection (Optional)	
9	Wirin	ig Co	onnection on the BI PRO	115
	9.1 Ir	nstall	Breakers	118
	9.2 M	1ake A	AC Connection to Inverter, Generator, Load and Grid	122
	9.3 M	1ake (Communication Connection	127
10	Close	e Wii	ring Cover and Turn on the System	133
			Below Steps before Turn on the System	
	10.2 To	urn o	n the System	133
	10.3 SI	hut D	own the System	134
11	Indic	ator	Light and Button	135
12	Troul	blesk	nooting	140
13	Main	tena	nce	149
14	Com	miss	sion the System	152
	Appe	endix	A: Wiring and Breaker Requirement	155
	Appe	endix	B: Emergency Stop Connection Steps	160
			C: Meter Y Connection Diagram	
			x D: System Wiring Diagram	
	, where		(D. Dysterri vvilling Diagramm	+ 0 2

1 About this Manual

1.1 Scope of Validity

This manual is an integral part of the A1-ESS-G2 system including A1-HYB-G2 series /A1-AC-G2 series / A1-SMT-G2 series inverter, battery and BI PRO. It describes the assembly, installation, commissioning and maintenance. Please read it carefully before operating. Store this manual where it will be accessible at all times.

The installation and instructions in this manual will take A1-ESS-G2 system including A1-HYB-G2 series inverter, battery and BI PRO as an example.



• Save these instructions-This manual contains important instructions for the A1-ESS-G2 system that shall be followed during installation of the system.

1.2 Target Group

This manual is for qualified electricians. The tasks described in this manual should only be performed by qualified electricians.

1.3 Symbols Used

The symbols that may be found in this manual are defined as follows.

Symbol	Description
⚠ DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
MARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION!	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE!	Provides tips for the optimal operation of the product.

1.4 About A1-ESS-G2 System

A1-HYB-G2 series inverter is transformerless type without galvanic isolation. It is designed and certified to fulfill the directives of ANSI/NFPA 70, NEC 690.41, UL 1741, UL 1741 SA, IEEE 1547 and IEEE 1547.1. The inverter converts the DC power generated by PV strings into AC power and stores the energy into the battery bank or feeds the power into the power grid. With the device, you have acquired the system that can be used to power critical loads during a grid outage by using a battery and realize automatic transfer from grid connection mode to off grid mode or from off grid mode to grid connection model by using backup interface (BI PRO). The inverter also has the ability to use power generated from PV arrays along with other string inverter.

A1-HYB-G2 series

The A1-HYB-G2 series inverter manages battery and system energy.

PV Array

The PV array works in MPPT mode. For 3.8 kW, 5.0 kW and 6.0 kW inverter, the number of PV string is two. For 7.6 kW inverter, the number of PV string is three.

RSD

The RSD provides an automatic disconnect of residential or small commercial PV systems, fully compliant with the rapid shutdown requirements of National Electric Code (NEC), ANSI / NFPA 70 Sections 690.12.

Battery (Optional)


The A1-HYB-G2 series inverter should be coupled a high voltage battery. The battery communicate with inverter via BMS and must comply with the specification of UL 1973.

Backup Interface (Optional)

The backup interface supports multi-inverter parallel connection, controls disconnection of house loads from the grid in case of a power outage and integrates the energy meter, microgrid interconnection device and generator to enable grid-tied solar backup.

SolaXCloud

SolaXCloud is an intelligent, multifunctional monitoring platform that can be accessed either remotely or through a hard wired connection. With the SolaXCloud, the operators and installers can always view key and up to date data.

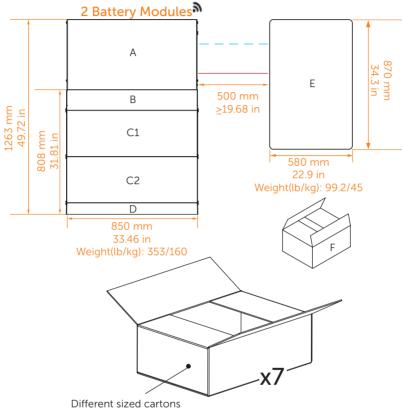


A1-ESS-G2 System and corresponding cartons

for products and accessories (A~F)


Α	Inverter
В	TBMS-MSC60060
C1	Rechargeable Li-ion Battery Module TP-HS50/5kWh
C2	Rechargeable Li-ion Battery Module TP-HS50/5kWh
D	Base for TP-HS50 Battery
Е	Backup Interface (referred to as BI PRO)
F	All Accessories Required for Two Installation Modes (T50 Battery)

1.4.1 System Overview

System overview of A1-HYB-G2

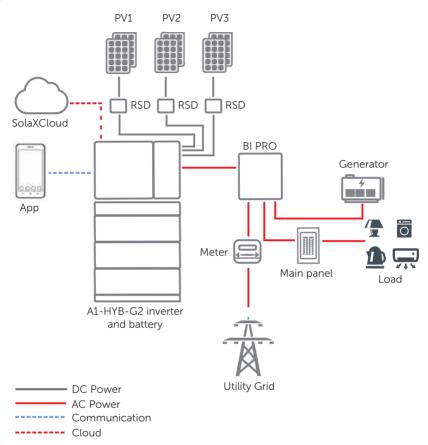

System overview of A1-AC-G2

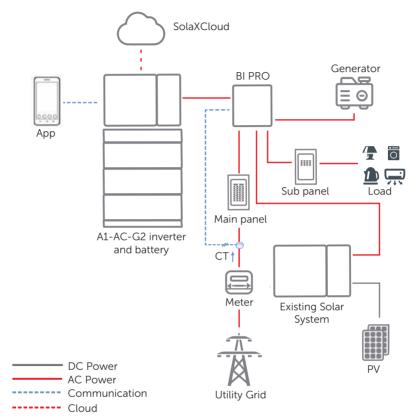

142 Solutions

- Whole home backup solution
 Up to 4 A1-HYB-G2 series inverter parallel
 Up to 4 battery modules stackable per inverter
 Homeowners are automatically provided with backup power in the event of grid interruption to whole home loads.
- Partial home backup solution
 Up to 4 A1-HYB-G2 series inverter parallel
 Up to 4 battery modules stackable per inverter
 Homeowners are automatically provided with backup power in the event of grid interruption to selected loads.
- Whole home backup solution with microgrid system
 Up to 4 A1-AC-G2 series inverter parallel
 Up to 4 battery modules stackable per inverter
 Friendly with existing PV system
 Homeowners are automatically provided with backup power in the event of grid interruption to whole home loads.
- Partial home backup solution with microgrid system
 Up to 4 A1-AC-G2 series inverter parallel
 Up to 4 battery modules stackable per inverter
 Friendly with existing PV system
 Homeowners are automatically provided with backup power in the event of grid interruption to selected loads.

2 Safety

2.1 General Safety Instructions

This manual contains important instructions for A1-HYB-G2 series inverter that should be followed during installation and maintenance for the inverter.

A1-HYB-G2 series inverter is designed and tested to meet all applicable North American and International safety standards. However, like all electrical and electronic equipment, safety precautions must be observed and followed during installation and operation of the A1-HYB-G2 series inverter to reduce the risk of personal injury and to ensure a safe installation.

Installation, commissioning, service, and maintenance of A1-HYB-G2 series inverter must only be performed by authorized personnel that are licensed and / or satisfy state and local jurisdiction regulations.

Before starting installation or commissioning, read the entire manual carefully to ensure correct and safe installation or commissioning. And keep the user manual in a safe place. All US electrical installations must comply and be in accordance with all the state, local, utility regulations, and National Electrical Code ANSI/NFPA 70.

2.2 Important Safety Instructions



 This document does not replace and is not intended to replace any local, state, provincial, including without limitation applicable in the jurisdiction of installation.
 SolaX assumes no responsibility for the compliance or non-compliance with such laws or codes in connection with the installation of the product.

♠ DANGER!

Danger to life due to high voltages in the product!

- Before installing or using the product, read all the instructions, cautions, and warnings in this manual. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury or death, or may damage the product.
- Before connecting the product to the electrical utility grid, contact the local utility company.
- All work must be carried out by a qualified electrician. Children should be supervised to ensure that they do not play with the appliance.

! WARNING!

• Do not install the system in a corrosive environment where it may be exposed to ammonia, corrosive gases, acids, or salts (eg: chemical plant, fertilizer storage areas, tanneries, near volcanic ash eruption).

∕!\ WARNING!

• Do not disassemble any parts of the product which are not mentioned in the installation guide. It contains no user-serviceable parts. See warranty for instructions on obtaining service. Attempting to service the device by yourself may result in a risk of electric shock or fire and will void your warranty.

/ WARNING!

- The inverter input and output circuits are isolated from the enclosure. This system does not include an isolation transformer and should be installed with an ungrounded PV array in accordance with the requirements of ANSI / NFPA 70, NEC 690.41.
- Equipment grounding is the responsibility of the installer and must be performed in accordance with all applicable Local and National Codes.

! WARNING!

Before operating the inverter, ensure that the inverter is grounded properly. This
product must be connected to a grounded, metal, permanent wiring system, or
an equipment-grounding conductor must be run with the circuit conductors and
connected to the equipment grounding terminal or lead on the product.

MARNING!

• When a ground fault is indicated, normally grounded conductors may be ungrounded and energized or normally ungrounded conductors may be grounded.

! WARNING!

• Do not operate the device when the device is running.

↑ CAUTION!

Only accessories shipped with the product are recommended to use. Using other
accessories may result in a fire or injury to the user.

(CAUTION!

Possible damage to health as a result of the effects of radiation!

• Do not stay closer than 7.87 in / 20 cm to system for a long time.

/ CAUTION!

Danger of burn injuries due to hot enclosure parts!

• During operation, the enclosure may become hot.

/ CAUTION

Risk of electric shock from energy stored in the capacitor.

Never operate on the inverter couplers, the Mains cables, battery cables, and PV
cables when power is applied. After switching off the PV, battery and Mains, always
wait for 5 minutes to fully discharge the intermediate circuit capacitors discharge
before unplugging DC, battery and Mains couplers.

/ CAUTION

 A1-HYB-G2 series only supports a certain type of lithium-ion battery (Manufacturer certified battery)!

! WARNING!

Do not expose system to ambient temperatures above 140°F (60°C) or below -13°F (-25°C).

! WARNING!

• Do not attempt to open, disassemble, repair, tamper with or modify the product. The product and its components are not user serviceable.

Battery safety instructions

A1-HYB-G2 Series inverter should be coupled with a high voltage battery. The battery must comply with UL 1973 and must be SolaX certified. As accumulator batteries may contain potential electric shock and short-circuit current dangers, to avoid accidents that might be thus resulted, the following warnings should be observed during battery replacement:

• Risks of explosion:

Do not subject the battery module to heavy impacts. Do not crush or puncture the battery module. Do not dispose of the battery module in a fire.

· Risks of fire:

Do not expose the battery module to temperatures in excess of 140°F.

Do not place the battery module near a heat source, such as a fireplace.

Do not expose the battery module to direct sunlight.

Do not allow the battery connectors to touch conductive objects such as wires.

· Risks of electric shock:

Do not disassemble the battery module.
Do not touch the battery module with wet hands.
Do not expose the battery module to moisture or liquids.
Keep the battery module away from children and animals.

• Risks of damage to the battery module:

Do not expose the battery module to liquids.

Do not subject the battery module to high pressures.

Do not place any objects on top of the battery module.

3 Specification

3.1 Specification of A1-HYB-G2 Inverter

PV Input

Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2	
Max.recommended PV power [W]	7600	10000	10000	15200	
Max.MPPT power [W]	5700	7500	9000	11400	
Max.DC voltage [V]		55	50		
Norminal DC operating voltage [V]		36	50		
Max. input current [A]		A:16/B:16		A:16/B:16/C:16	
Max. short circuit current [A]		A:20/B:20		A:20/B:20/C:20	
MPPT voltage range [V]		90-	500		
MPPT voltage range [V](full load)	176-500	232-500	278-500	235-500	
Start input voltage [V]		12	20		
No. of MPP trackers		2		3	
Strings per MPP tracker		A:1/B:1		A:1/B:1/C:1	
DC disconnection switch		Υє	es		
AFCI		Ye	es		
Max. inverter backfeed current to	27 A rms / 1 cycle,				
the array [A]	400 A peak / 0.02 ms				
AC Input/Output					
Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2	
Norminal AC power [VA]	3307/3816	4347/5016	5200/6000	6594/7608	
Max. apparent AC power [VA]	3307/3816	4347/5016	5200/6000	6594/7608	
Rated grid voltage [V]		208	/240		
Rated grid Frequency [Hz]		50	/60		
Norminal AC current [A]	15.9	20.9	25	31.7	
Max. Output Continuous current [A]	15.9	20.9	25	31.7	

Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2
Maximum output fault current and duration [A/ms]		48.	/90	
Maximum output fault peak current and duration [A/ms]		51:	5/5	
Displacement power factor		0.8 leading t	o 0.8 lagging	
Total harmonic distortion (THD, rated power)		<;	3%	
Parallel operation		Y	es	
Maximum output overcurrent protection [A/P]	20/2	25/2	30/2	40/2
General Data				
Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2
Dimensions (WxHxD) [in/mm] ^①		33.5 × 17.9 × 5.8	/ 850 × 455 × 148	
Weight [lb/Kg] ^①		75 .	/ 34	
Cooling concept		Natural convectio	n with internal fan	
Topology		Transfo	rmerless	
Communication	RS485,	CAN, WiFi (optional)	/ 4G (optional), Dry (Contact
Revenue Grade Data, ANSIC12.20		0.5% revenue ç	grade (optional)	

Note:
① : The Dimensions and Weight data is for an inverter containing a metal cover.

Battery Input/Output

Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2		
Battery type		Lithiur	n (LFP)			
Input/output voltage range [V]		75-450				
Rated input/output voltage [V]		1!	50			
Maximum input power [W]	4060	5336	6383	8094		
Maximum output power [W]	3816	5016	6000	7600		
Maximum Input/output current [A]		5	j4			
Reverse-Polarity Protection		Y	es			
Cycle efficiency charging to discharging (PCS Only)	88.5%	90.5%	91.5%	92.5%		

Efficiency, Power Consumption and Standard

Model	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2
CEC Weighted Efficiency (PV to GRID)		97.	5%	
Maximum Inverter Efficiency		98	.0%	
Power consumption				
Internal consumption(night) [W]		<	:3	
Standard				
	UL 1741, UL 1741	L SA, UL 1741 SB, UL 1	1741 PCS, UL 1699B,	UL 1998, UL 991,
Safety and Certifications	CSA C22.2 No.107.1-16, CSA C22.2 No.292-18, CSA C22.2 No.330-17, IEEE Std 1547-2018, IEEE 1547-2019, IEEE Std 1547-2020, Rule 21, HECO SRD V2.0			
EMC		FCC part	15 class B	
RoHS		Y	es	
Environment Limit				
Environment limit	A1-HYB-3.8K-G2	A1-HYB-5.0K-G2	A1-HYB-6.0K-G2	A1-HYB-7.6K-G2
Protection class		NEM	IA 4X	
Operating Temperature Range [°F (°C)]		-13 to +140	(-25 to +60)	
De-rating start temperature [°F (°C)]		113 (45)	or above	
Storage temperature Range [°F (°C)]		-13 to +167	(-25 to +75)	
Humidity		0%-9	5% RH	
Altitude [ft (m)]		9843 (30	000) MAX	
Noise emission(typical) [dBA]		<	30	
Overvoltage category		IV (electric supply	y side), II (PV side)	

3.2 Specification of Battery

Model	T-BAT H 10.0	T-BAT H 15.0	T-BAT H 20.0
Nominal Voltage (Vdc)	102.4	153.6	204.8
Operating Voltage (Vdc)	90-116	135-174	180-232
Nominal Capacity (Ah)	100	100	100
Nominal Energy (kWh)	10	15	20
Usable Energy 90% DOD (kWh)	9.2	13.5	18
Max. Charge/Discharge Current (A)	54	54	54

Model	T-BAT H 10.0	T-BAT H 15.0	T-BAT H 20.0	
Recommend Charge/Discharge Current (A)		50		
Standard Power (kW)	5.12	7.68	10.24	
Max. Power (kW)	5.5	8.3	11.1	
Battery Roundtrip Effciency(0.2C,25°C/77°F)	95%			
Expected Lifetime(25°C/77°F)	10 years			
Cycle Life90% DOD(25°C/77°F)	6000 cycles			
Charge Temperature	32°F~127.4°F/0°C~53°C			
Discharge Temperature	-14°F~127.4°F/-10°C~53°C			
Storage Temperature	-4°F~86°F/-20°C~30°C (12 months)			
Storage Temperature	86°F~122°F/30°C~50°C (6 months)			
Ingress Protection	on IP65			

3.3 Specification of Backup Interface

GRID INPUT	
Nominal AC output voltage [V]	120 / 208, 120 / 240
Nominal AC frequency [Hz]	60
Maximum continuous input current rating [A]	160
OUTPUT TO MAIN PANEL IN GRID TIED OPERATION	
Nominal AC output voltage [V]	120 / 208, 120 / 240
Nominal AC frequency [Hz]	60
Maximum continuous output current rating [A]	160
OUTPUT TO MAIN PANEL IN BACKUP OPERATION	
Nominal AC output voltage [V]	120 / 208, 120 / 240
Nominal AC frequency [Hz]	60
Split phase imbalance output current [A]	41.7
Maximum output current [A]	160
INPUT FROM INVERTER	
Number of inverter inputs	4
Maximum input overcurrent protection device [©] [A]	200
Solar inverter production meter	Optional

NON-BACKUP PORT	
Nominal AC output voltage [V]	120 / 208, 120 / 240
Nominal AC frequency [Hz]	60
Maximum continuous output current rating [A]	160
SOLAR INVERTER PORT	
Nominal AC output voltage [V]	120 / 208, 120 / 240
Nominal AC frequency [Hz]	60
Maximum continuous output current rating [A]	64
GENERATOR	
Maximum AC power @240V [W]	24000
Maximum AC power @208V [W]	20800
Maximum input overcurrent protection device ⁽³⁾ [A]	125
Maximum continuous input current [A]	100
Auto generator start	Yes
SMART LOAD	
Number of "Smart Load 80A" branch [120V]	2
Number of "Smart Load 80A" branch [240V]	1
Number of "Smart Load 50A" branch [120V]	4
Combine 120V branches to 240V / 208V branch	Yes
GENERAL INFO	
Number of dry contact	4
Number of communication RS485 ports	4
LED display	3
Weight [lbs / kg]	99.2 / 45
Maximum elevation [feet / m]	9842 / 3000
Noise [dB]	< 40
Operating temperature range [°F / °C]	-13 to +113 / -25 to +45
Protection rating	NEMA 3R
Dimensions [H x W x D] [in / mm]	32.8 x 21.7 x 8.6 / 832 x 550 x 218.5
STANDARD COMPLIANCE	
Safety	UL1741, CSA 22.2 NO.107.1, UL67 ^② , UL869A ^②
Emissions	FCC part 15 Class B
	<u> </u>

Note

①: Not included, Installer must provide correctly rated breaker as per circuit breaker list above.

②: Sections from these standards were used during the safety evaluation and included in the UL1741 listing.

4 Site Requirements and Preinstallation Guidance

4.1 Physical Requirements

The installation of A1-ESS-G2 system including A1-HYB-G2 inverter, battery and BI PRO must be done in accordance with local codes and the National Electric Code (NEC).

The whole system requires adequate clearance for the installation, cabling or conduit and airflow. Do not install anything above each unit that limits access to the unit or that might fall and damage the unit. Do not mount each unit upside down.

The inverter and battery in the system can be wall-mounted or floor-mounted. The BI PRO in the system can be wall-mounted and installed on the right side of inverter. It needs to be configured for cable entry at the bottom and sides of the enclosure.

Each unit has mounting bracket to support it. Mounting requirements based on wall type are provided in "7.1 Overview of Installation Schemes".

4.2 Dimensions of the System

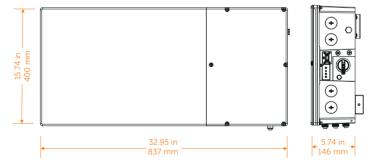


Figure 4-1 Dimensions of inverter

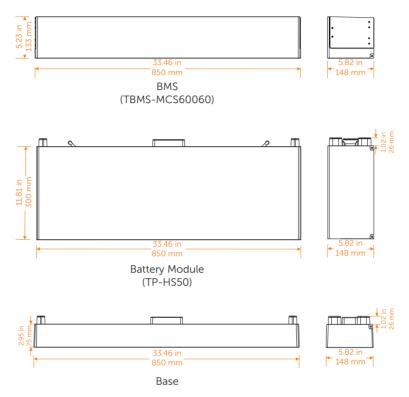


Figure 4-2 Dimensions of battery


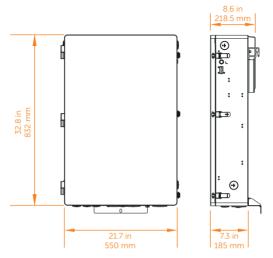



Figure 4-3 Dimensions of BI PRO

4.3 Installation Space Requirement


Inverter and battery space requirement

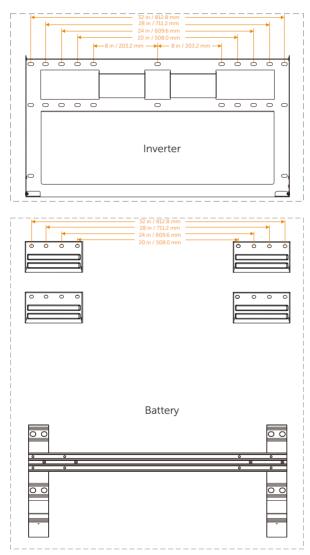

To ensure good heat dissipation and convenient disassembly of the inverter and battery, the minimum clearance around the inverter and battery shall not be less than the following values, as shown below. The height above the ground marked below is recommended assuming that four BATs are installed with floor-mounting.

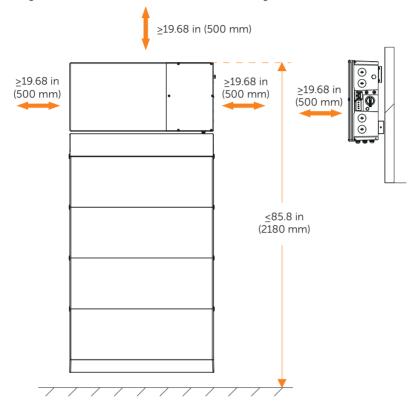


For multi-inverter installation, please reserve the space of 19.68 inch (500 mm) at least between each left and right inverter and at least 19.68 inch (500 mm) distance from the ceiling . If multiple inverter are mounted in areas with high ambient temperatures, increase the clearances between the inverter and batteries and ensure an adequate fresh-air supply if possible.

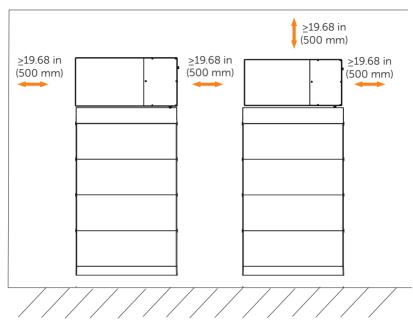


NOTICE!

• In case of wall-mounting, the distance from base to ground is decided according to the local regulations.

 BI PRO space requirement



To ensure good heat dissipation and convenient disassembly of the BI PRO, the minimum clearance around the BI PRO shall not be less than the following values, as shown below.

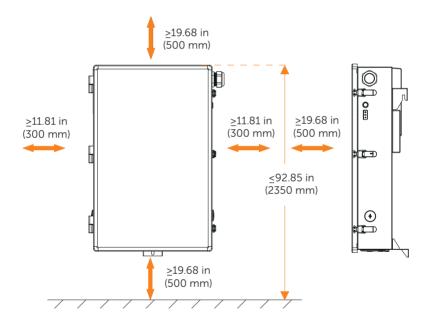

Mounting bracket anchoring details


Please refer to the local building codes for actual anchoring conditions.

The following are the specification requirements for wall flatness and perpendicularity.




Recommended Installation Space

Example for single inverter installation:

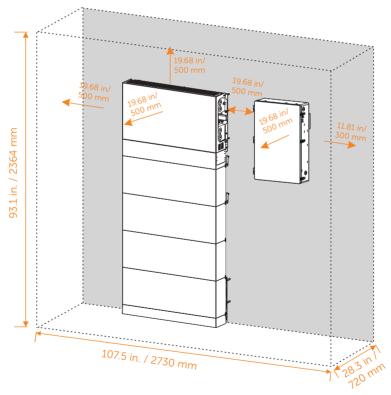


Recommend installation space: (W*D*H) 107.5 in. * 28.3 in. * 93.1 in. / 2730 mm * 720 mm * 2364 mm

Example for multi-inverter installation:

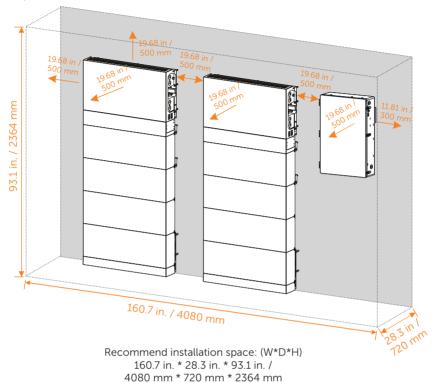

4.4 Installation Environment Requirement

- Not be exposed to glare.
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not near the television antenna or antenna cable.
- Not higher than altitude of about 9843 ft (3000 m) above sea level.
- Not in environment of precipitation.
- Be sure the ventilation is good enough.
- The ambient temperature in the range of -13°F (-25°C) to +140°F (+60°C).
- Flatness meets local building standards.
- Avoid direct sunlight, rain exposure, snow laying up during installing and operating.

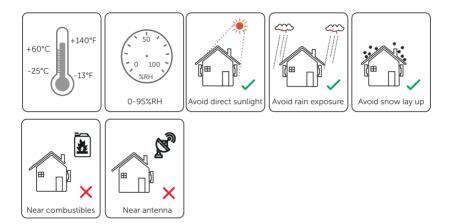

NOTICE

- For outdoor installation, precautions against direct sunlight, rain exposure and snow accumulation are recommended.
- Exposure to direct sunlight raises the temperature inside the device. This temperature rise poses no safety risks, but may impact the device performance.

5 Preparation before Installation

A1-ESS-G2 is 100% tested and packaged and visually inspected before leaving our manufacturing facility. Please make sure the inverter is intact during transportation. If there are some visible damages, such as cracks, please contact your dealer immediately. Open the package and fetch out the product, firstly check the accessories. The packing list shows as below.

∕!\ DANGER!

 Before installation, please make sure the breaker of battery is in "OFF" position. During installation, make sure the battery terminal is not short-circuited.

5.1 Packing List of Inverter





Item	Name	Quantity	Description
/	Inverter	1 pc	Product
/	Metal cover	1 pc	Protect the inverter
/	Bracket	1 pc	Support the inverter
А	8-pin female terminal block with terminating resistor	1 pc	Additional 8-pin female terminal block with terminating resistor
В	Grounding terminal	5 pcs	For grounding
С	M5XL10 screw	10 pcs	Fix the cover, cable protective guard and cover fixing plate
D	10 AWG ferrules	6 pcs	For PV cable
Е	Fixing plate of cover	2 pcs	Connect the cover and the bracket
F	Cable protective guard	1 pc	Protect the cable between inverter and BMS
G	PE cable	1 pc	Grounding conductor between inverter and BMS
Н	Self-tapping screw	12 pcs	Fix the bracket
I	Washer	12 pcs	Fix the bracket
J	Expansion set	12 pcs	Fix the bracket
/	Communication Dongle	1 pc	For communication
К	Document	/	Guide the installation
L	M4XL10 screw	2 pcs	Fix the fixing plate between inverter bracket and BMS
М	8 AWG ferrules	3 pcs	For AC cable

5.2 Packing List of Battery

BMS (TBMS-MCS60060)


Hereinafter referred to as "MCS60060"



Item	Name	Quantity	Description	
/	BMS	1 pc	Product	
Α	Document	/	User Manual, Guide the installation and maintenance	

Battery Module (TP-HS50)

Hereinafter referred to as "TP-HS50"

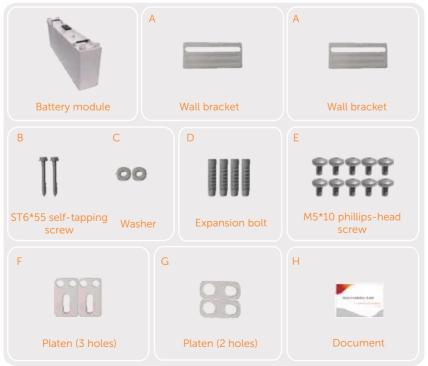

Item	Name	Quantity	Description
/	Battery module	1 pc	Product
А	Wall bracket	2 pcs	Support battery module to be mounted on the wall
В	ST6*55 self-tapping screw	2 pcs	Fix the bracket
С	Washer	2 pcs	Fix the bracket
D	Expansion bolt	4 pcs	Fix the bracket
E	M5*10 phillips-head screw	10 pcs	Fix the fixing plate
F	Platen (3 holes)	2 pcs	Connect two battery modules with bracket
G	Platen (2 holes)	2 pcs	Connect two battery modules
Н	Document	/	Guide the installation

NOTICE

• The above-mentioned accessories are only for one battery module.

All Accessories Required for Two Installation Modes (T50 Battery)

Hereinafter referred to as "Accessories Required"



Preparation before Installation

Name	Quantity	Description
M8*85 expansion screw	6 pcs	Fix the base support in case of concrete wall
M5*8 countersunk screw	4 pcs	Fix the transverse plate with base support
M5*20 countersunk screw	6 pcs	Fix the two sides of base
M8*88 self-tapping screw	6 pcs	Fix the base support in case of wooden wall
Washer	6 pcs	Fix the base support in case of wooden wall
Adjustment screw	4 pcs	Adjust the base to be leveled
Transverse plate	1 рс	Support the base
Base support	2 pcs	Support the base
	M8*85 expansion screw M5*8 countersunk screw M5*20 countersunk screw M8*88 self-tapping screw Washer Adjustment screw Transverse plate	M8*85 expansion screw 6 pcs M5*8 countersunk screw 4 pcs M5*20 countersunk screw 6 pcs M8*88 self-tapping screw 6 pcs Washer 6 pcs Adjustment screw 4 pcs Transverse plate 1 pc

Base for TP-HS50 Battery



Item	Name	Quantity	Description
/	Base	1 pc	Product

5.3 Packing List of Backup Interface



Item	Name	Quantity	Description
/	Backup Inteface (BI PRO)	1 pc	Product
/	Bracket	1 pc	Support the BI PRO to be mounted on the wall
Α	Rolled strip	8 pcs	Fix the cable
В	Circuit breaker label	1 pc	For attaching to circuit breakers
С	Document	/	Quick installation guide of A1-ESS-G2 System
D	Hexagonal stud	1 pc	Fix the breaker
Е	M4*L12 screw	3 pcs	Fix the breaker
F	Self-tapping screw	9 pcs	Eight for fixing the bracket and one for fixing the BI PRO
G	Washer	9 pcs	Eight for fixing the bracket and one for fixing the BI PRO
Н	Expansion set	9 pcs	Fixing the bracket
/	Communication cable	1 pc	Communicate with inverter
/	Perforating paper	/	For hole location

5.4 Tools Required

Safety gloves

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site. Please note that the tools used must comply with local regulations.



Safety boots

Safety goggles

Anti-dust mask

6 Plan the Installation Site


Choose a propriate location

Choose a wall capable of supporting the full weight of inverter, battery and BI PRO. If floor-mounting inverter and battery, choose a level surface adjacent to the below wall.

- Wood studs spaced at 12, 16, 20, 24, 28 and 32 inch
- Steel material of sufficient thickness
- Solid concrete or masonry

Choose cable entry of inverter

A conduit fitting or cable gland must be used when wiring connection. For the wiring connection of inverter, the cable is routed from the right side of inverter. Totally four 1 inch openings are available for connecting.

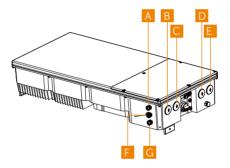


- A BAT+
- B AC conduit plug
- C Inverter communication connection
- PV conduit plugs
- **E** PV conduit plugs
- Battery communication connection
- G BAT-

Choose cable entry of BI PRO

A conduit fitting or cable gland must be used when wiring connection.

For the wiring connection of BI PRO the cable is routed from the bottom and sides of device. Totally three 2 inch (D, F and G) and eight 1 inch openings are available for connecting.

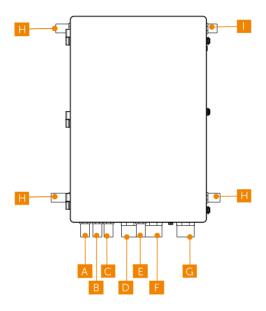


Item	Description
А	Generator plug
В	Solar plug
С	ESS plug
D	Smart load plug
E	Non-backup plug
F	Backup plug
G	Grid plug
Н	Reserved
I	Communication conduit plug

Plan amount and size of conduit

Calculate the amount and size of conduit needed for the installation, based on filllimits and local code requirements. An adapter may be required between the entry into the wiring compartment and the conduit.

Plan the distance of each unit in the system

The figure below is for maximum distances between each system unit. Wire gauge must meet the local requirements and it changes based on distance. Please refer to "Appendix A: Wiring and Breaker Requirement".

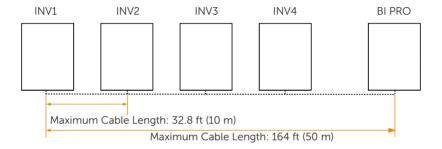


7 Mechanical Installation


7.1 Overview of Installation Schemes

The anchoring details below is demonstrated assuming that four BATs are installed.

Scheme A


Wood Studs (spaced at 12 and 24 inches)

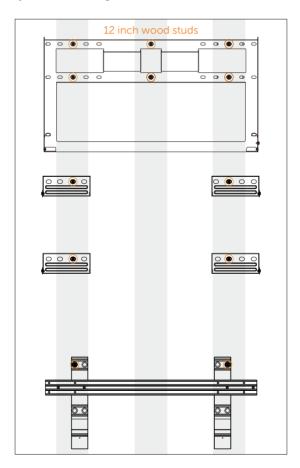


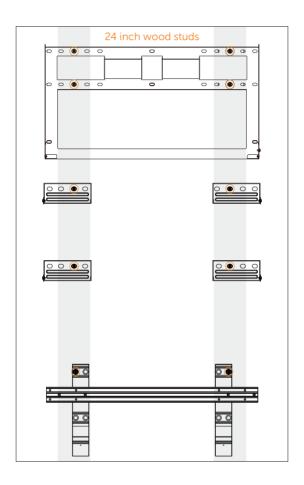

Scheme B


Wood Studs (spaced at 16 and 32 inches)

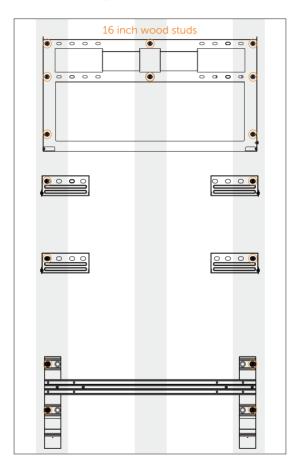

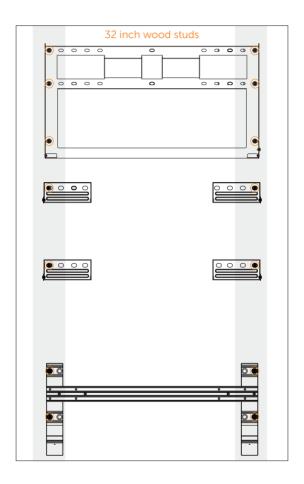


Scheme C

Wood Studs (spaced at 20 inches)

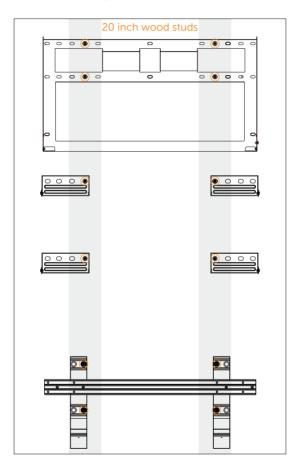

Scheme D


Wood Studs (spaced at 28 inches)

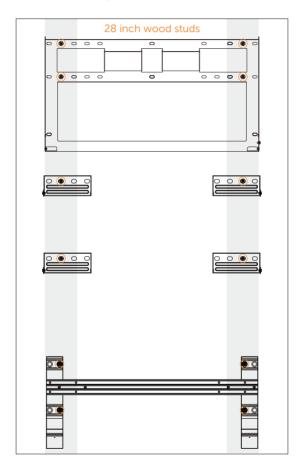

Scheme E

Concrete or Masonry


If anchoring to concrete or masonry wall, use 8 screws with washers respectively for inverter and battery and make sure the screws are at least 1.49 in (38 mm) away from the edge of bricks or blocks. Punching holes spaced at 24 inch is recommended.

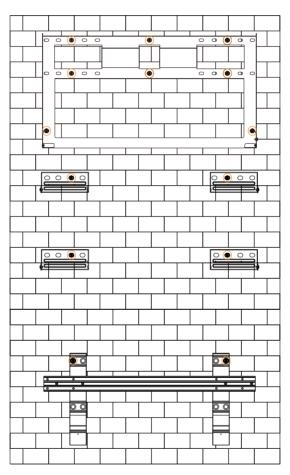

Scheme F


Steel material of sufficient thickness

If anchoring to steel material, use 8 screws with washers respectively for inverter and battery. Punching holes spaced at 24 inch is recommended.

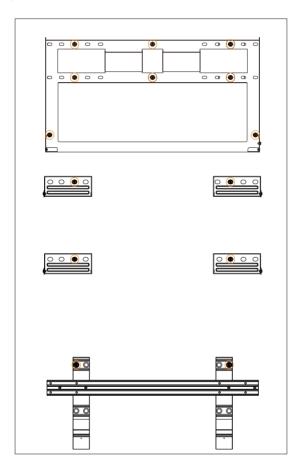


Weight and mounting height instructions

4 Battery Modules

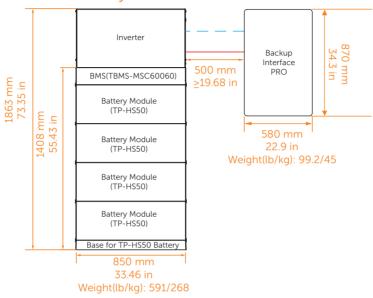


3 Battery Modules

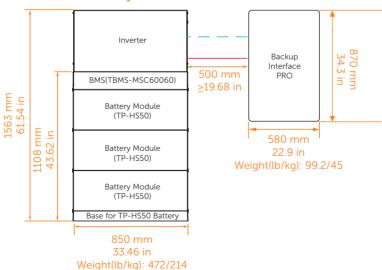

7.2 Installation Methods


There are two alternative installation methods (wall mounting and floor mounting) and several schemes available for users. For details, please refer to "7.1 Overview of Installation Schemes". The following installation will take Scheme "base+four batterys+BMS+inverter+BI PRO" mounting on the wooden wall with studs spaced at 32 in / 812.8 mm as an example.

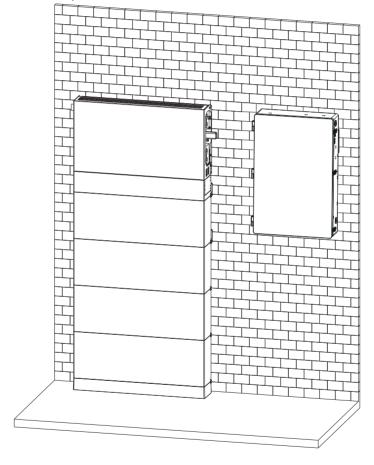

Floor-mounting

NOTICE

• For detailed steps of floor-mounting, please refer to "7.3 Floor-mounting".

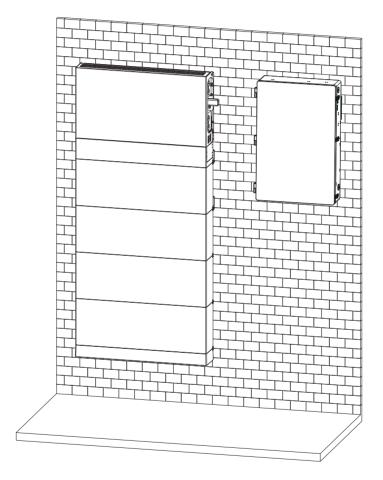

Wall-mounting


NOTICE

• For detailed steps of wall-mounting, please refer to "7.4 Wall-mounting".

7.3 Floor-mounting

Step 1: Mount the battery

a) Remove the dust cover of the base.

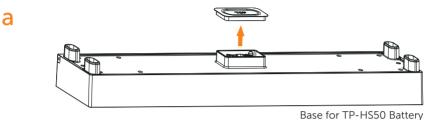


! WARNING!

• During installation, please make sure battery port is not short-circuited.

NOTICE

• A distance of at least 19.68 in / 500 mm shall be set aside on both sides of the whole system.

b) Insert the adjustment screw [Accessories Required (part F)] from the bottom of base and clockwise / anticlockwise turn the adjustment screws by torque wrench to make the base leveled.

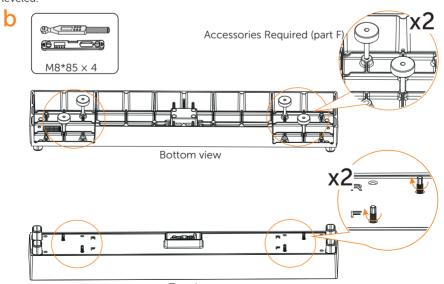

Top view


NOTICE

• Use a spirit level to measure the sides of the Base to ensure they are even.

NOTICE


- Clockwise turn the adjustment screws to lower down the base.
- Anticlockwise turn the adjustment screws to lift up the base.


c) Locate the base 1.57 in / 40 mm away from the wall, accurately mark the location of the base on both sides with a marker.

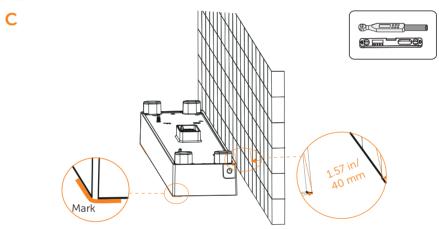

d) Manual-remove the top and bottom dust cover of the battery module and catch hold of the handle to stack the battery module to the base. Make sure that each connecting pole of the battery module or base is well pluged into the slot of the next battery module which is on the bottom of the module.



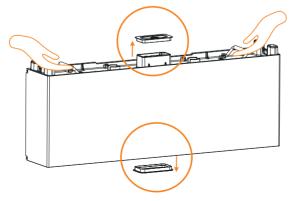

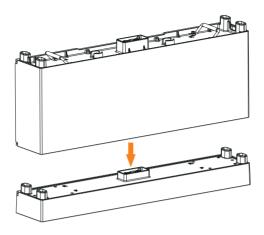


/ WARNING!

• If the Base is shifted after placing a Battery Module, move it to its original location according to the mark previously drawn.


! WARNING!

• During installation, please make sure battery port is not short-circuited.

e) Mount the fixing plate (2 holes) [TP-HS50 (part G)] using M5*10 cross screw [TP-HS50 (part E)], and secure M5*10 screws (2 for each side) to connect Base and Battery Module.

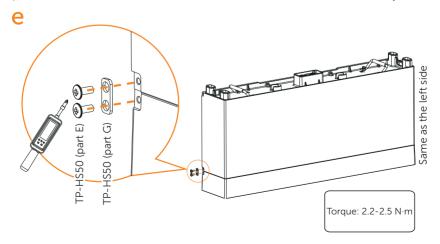



f) Place two battery modules in turn, and secure both left and right sides with screws (4×M5*10 countersunk screw).

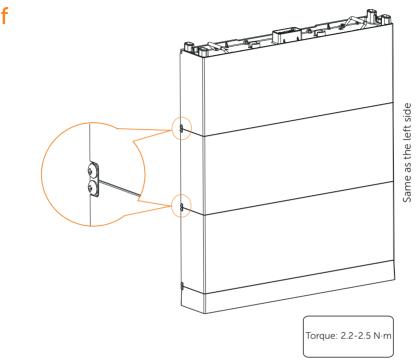

NOTICE

- In the case of the concrete wall, please perform the following steps strictly.
- In the case of the solid wood wall, please go directly to step i.
- g) Mount the bracket of the battery module.
- (1) Attach M5*10 screw [TP-HS50 (part E)] through the platen [TF-HS50 (part F)] to Wall Bracket, but be sure not to tighten;
- (2) Place such Wall Bracket [TP-HS50 (part A)] to the wall, align its holes to the holes on the Battery Module, and use a spirit level to measure the Wall Bracket to ensure it's even;
- (3) Accurately mark the location of the Wall Bracket on both sides with a pen;
- (4) Draw circles according to the actual stub spacing:
- (5) Remove the Wall Bracket, and then drill the two holes (at least 3.54 in./90 mm) by a drill (drill bit: Ø0.39 in./10 mm, at least 9.84 inch/250 mm long).

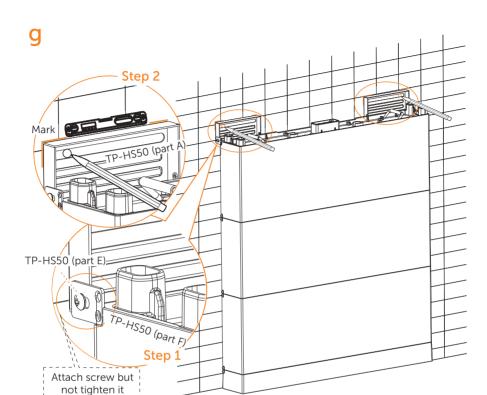


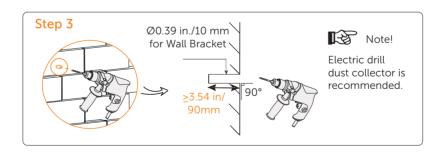

/!\ CAUTION

 Please re-mount the dust cover to the battery module before drilling holes to avoid dust falling into the interface and do remember to remove the dust cover again after the installation wall bracket completed. h) Place expansion bolts [TP-HS50 (part D)] into the two holes.


h

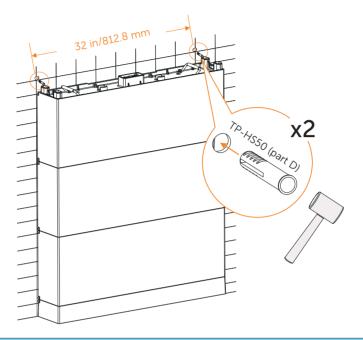

NOTICE

• In the case of the solid wood wall, the Expansion Bolt is not required to be installed.

i) Place the Wall Bracket on the wall where the mark is drawn previously, and then secure the Wall Brackets on the wall using M6 Tapping Screws (\times 2) and Washers [TP-HS50 (part B and C)] (Torque: 6-8 N·m).

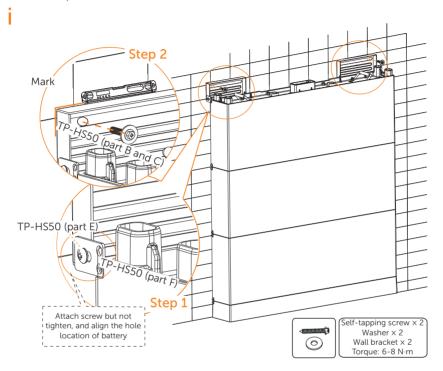


TP-HS50 (part F)

Let the Platen down


j) Let the platen [TP-HS50 (part F)] down and place the fourth battery module.

k) Fix the fixing plate (3 holes) [TP-HS50 (part F)] on both sides of battery module using M5*10 cross screw [TP-HS50 (part E)], and then tighten M5*10 screws.

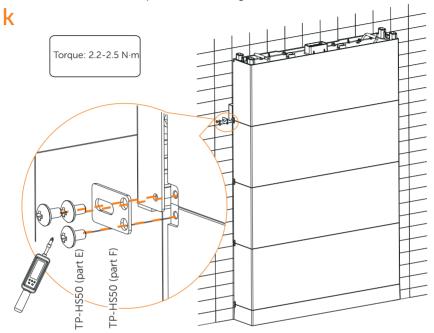

NOTICE!

- In the case of the concrete wall, please perform the following steps strictly.
- In the case of the solid wood wall, please go directly to step l-(7), and the Expansion Blot is not required to be installed.
- l) Mount the wall bracket for the four battery module and BMS.
- (1) Attach M5*10 screw to Wall Bracket with the platen [TP-HS50 (part F)], but be sure not to tighten;
- (2) Place such Wall Bracket to the wall, align its holes to the holes on the Battery Module, and use a spirit level to measure the Wall Bracket to ensure it's even;
- (3) Accurately mark the location of the Wall Bracket on both sides with a pen;
- (4) Draw circles according to the actual stub spacing;
- (5) Remove the Wall Bracket, and then drill the two holes (at least 3.54 in./90 mm) by a drill (drill bit: Ø0.39 in./10 mm, at least 9.84 inch/250mm long);
- (6) Place Expansion Bolts;
- (7) Secure Wall Brackets using M6 Tapping Screws and Washers (Torque: 6-8 N·m). Refer to the Steps e, f, g and h.

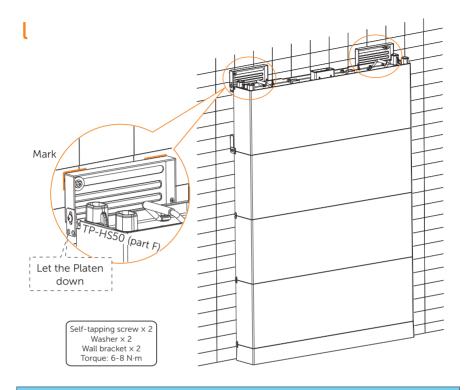


NOTICE

• Electric drill dust collector is recommended.


♠ CAUTION

 Please re-mount the dust cover to the battery module before drilling holes to avoid dust falling into the interface and do remember to remove the dust cover again after the installation wall bracket completed. m) Remove the bottom dust cover of BMS and place the BMS on the top. Fix the fixing plate (3 holes) [TP-HS50 (part F)] on both sides of battery module using M5*10 cross screw [TP-HS50 (part E)], and then tighten M5*10 screws.

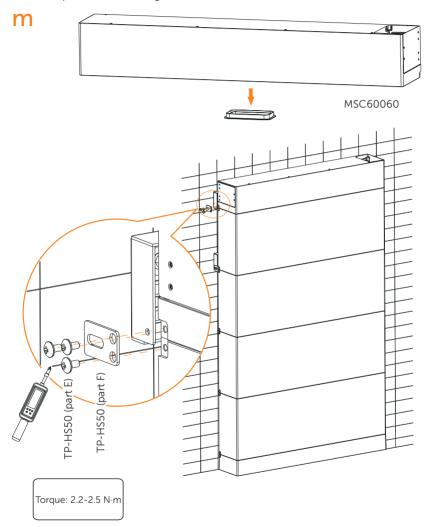


Step 2: Mount the inverter

- a) Two M4 holes are reserved on the BMS for fixing the bracket of the inverter.
- Screw in M4 screws [Inverter (part L)] through the fixing plate [Inverter (part E)] to pre-fix the bracket on the BMS, but be sure not to tighten.
- Hold the bracket firmly to the wall surface.
- Tighten the M4 screws to fix the bracket on the BMS.

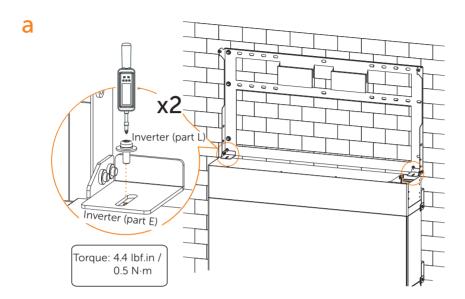

b) Use the bracket as the template to mark the screw hole location on the wall.

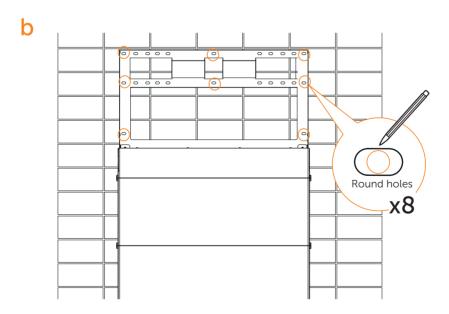


c) Unscrew the two M4 screws to disassemble the bracket. Drill holes with power drill, and make sure the holes are deep enough (2.16 in / 55 mm) to support the inverter.

NOTICE

• The figure below is only used for showing the depth and location of holes. Make sure the holes are in the center of each stud and keep at least 1.49 in / 38 mm away from the edge of concrete bricks or studs before marking holes.




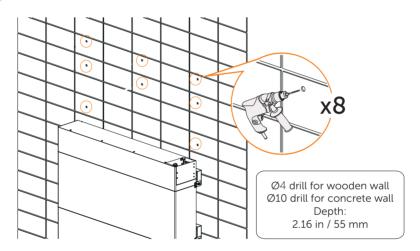


NOTICE

• For solid concrete wall, please use Ø10 drill.


d) Insert the expansion tube [Inverter (part J)] into the hole and use rubber hammer to knock the expansion tube into the wall; (It can be ignored in case of wooden wall.)

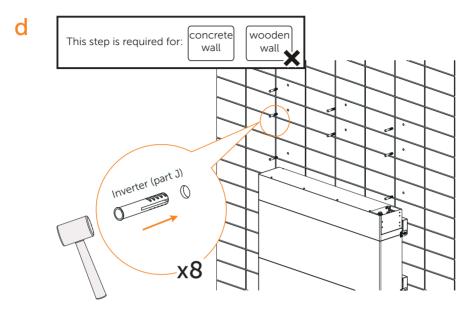


e) Align the bracket over the holes and re-fix the bracket on the BMS with screws [Inverter (part L)]. And set the tapping screw [Inverter (part H)] through the washer [Inverter (part I)] and secure the bracket with tapping screws. Please hold the bracket firmly to the wall surface before fixing it.

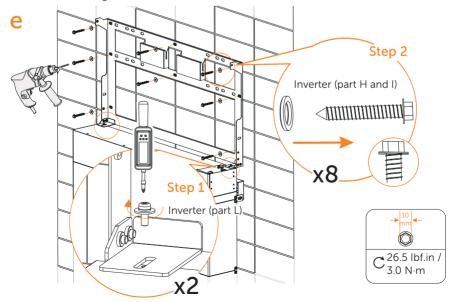

f) Place the inverter to be seated on the corresponding position of the bracket. As A1-HYB-G2 series inverters are heavy, weigh 75 lbs / 34 Kg. They should be lifted up by two persons and placed carefully onto the bracket. Then adjust the inverter to be centered on the whole system.

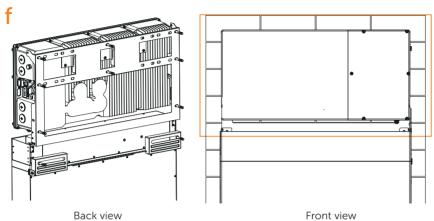


g) Place the protective guard [Inverter (part F)] on the correct position of battery's BMS prior to the wiring connection between inverter and battery and fix it with the inverter bracket with M5 screws [Inverter (part C)].

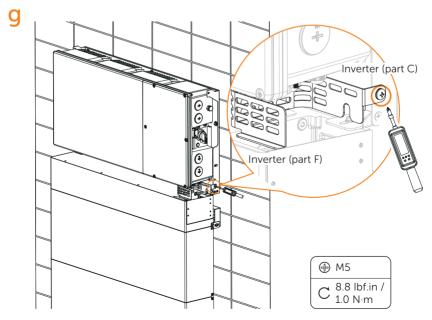



Open the wiring box cover to complete all the wiring connection.

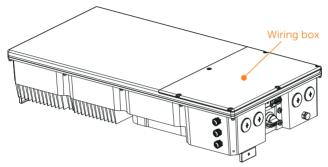



NOTICE

• For detailed wiring connection, please refer to "8 Wiring Connection on the Inverter".


h) Pre-mount the fixing plate with scews [Inverter (part C)] on the two sides of metal cover and mount the metal cover on the inverter. Please make sure the four dowel pins are inserted into the holes of BMS and adjust the whole system (inverter and battery) to be leveled.



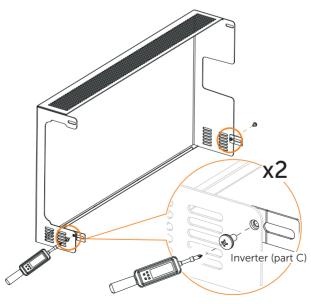

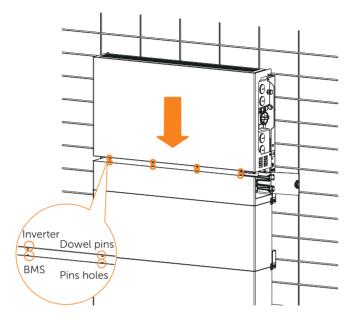


i) Fix the metal cover with six M5 screws [Inverter (part C)].

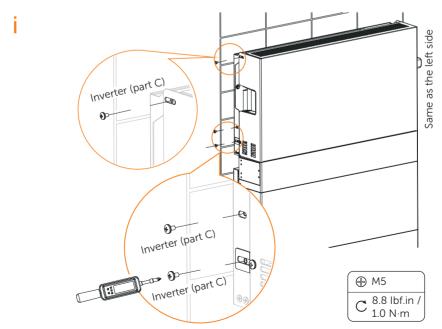

Step3: Mount the BI PRO

a) Use the perforating paper as a template to mark the screw hole location on the wall; And drill nine holes on the wall.

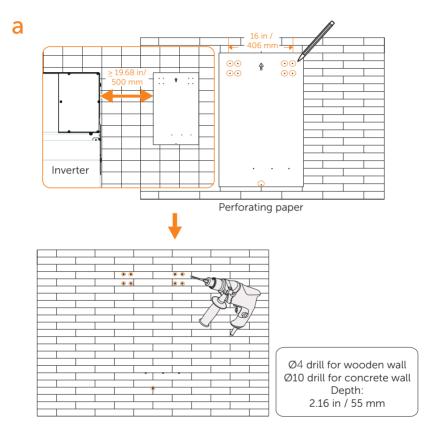


NOTICE!

• For solid concrete wall, please use Ø10 drill.


NOTICE

• The inner-side hole of the bracket is 12 in / 305 mm.

b) Use mallet to knock the nine expansion tube [Backup Interface (part H)] into wall (This step can be ignored in case of wooden wall).

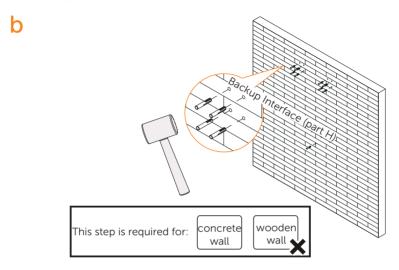


c) Secure the bracket on the wall with tapping screw [Backup Interface (part F)] and washer [Backup Interface (part G)] using torque wrench. Please hold the bracket firmly to the surface of the wall when fixing bracket.

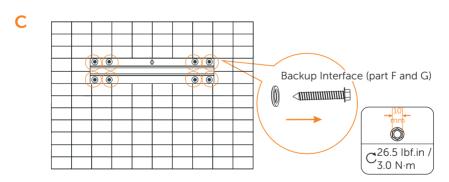


d) Hang the BI PRO on the bracket. Please make sure the cleat is well seated on the bracket.



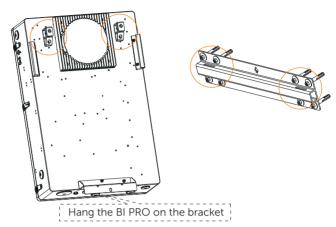


e) Secure the BI PRO by screwing in the tapping screw with washer on the bottom of BI PRO.



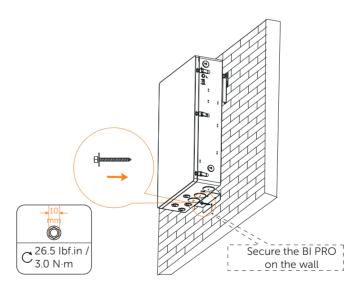



Open the door of Backup Interface and remove the dead front to complete all the wiring connection.

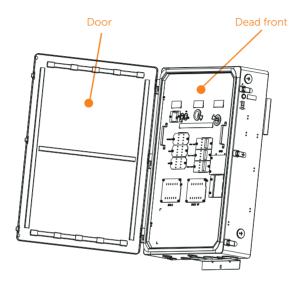


NOTICE

• For detailed wiring connection, please refer to "9 Wiring Connection on the BI PRO".

Drill a hole in the back (Not recommended)


a) These three holes correspond to the holes below the perforated paper.



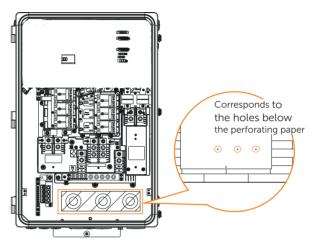

b) Drill the hole with a hole cutter. Choose 1 inch or 2 inch size (Metal chips must be cleaned after drilling).



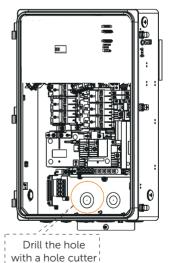


Choose 1 inch or 2 inch size (Metal chips must be cleaned after drilling)

c) Lock nut, waterproof gasket(outside), conduit.


NOTICE!

• Prohibit the flow of water inside the tubing water into the machine!

C

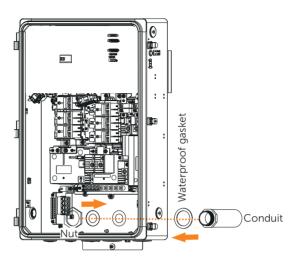

d) The top of the nut and contact surface of the threads must be cleaned after locking the nut, as well as the contact surface between the nut and the box.

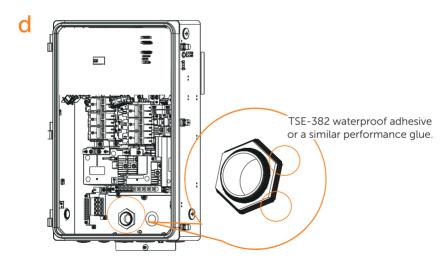


NOTICE

• Drilling a hole in the wall is required before cutting a hole in the rear. To guarantee easy installation of the conduit and sealing with the chassis, the hole's size must be greater than the conduit's outside diameter.

7.4 Wall-mounting


NOTICE!

• For wall mounting, make sure the BMS breaker is no more than 6.56 ft /2 m above the ground so that you can easily shut down the system in emergencies.

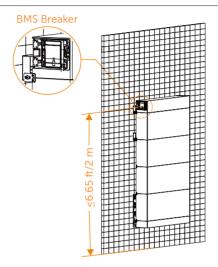


Step 1: Mount the battery

a) Take out of the accessories from a separate accessory box. Fix the base support on the transverse plate with M5 countersunk head screw [Accessories Rrequired (part B)]. Studs spaced at 16, 28 and 32 inch: secure the transverse plate and base support using screws (2×M5*8 countersunk head screw), and tighten them (Torque: 2.2-2.5 N·m).

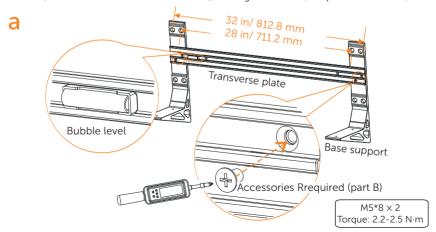

Studs spaced at 12, 20 and 24 inch: secure the transverse plate and base support using screws ($2 \times M5*8$ countersunk head screw), and tighten them. See figure below.

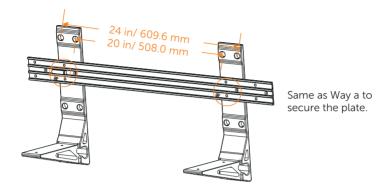


- b) Mark the hole location and drill holes:
- (1) Place the assembled Transverse Plate and Base Support on the wall, look the cylindrical plastic bubble level on the Transverse Plate. If the bubble isn't in the center, slightly bow it to the horizontal.
- (2) Then determine the position of holes.
- (3) Mark it with a pen.
- (4) Remove it and drill the four holes (at least 3.54 in./90 mm) by a drill ($\emptyset 0.47$ in./12 mm for concrete wall, or $\emptyset 0.24$ in./6 mm solid wood wall).

32 in/ 812.8 mm Step 1 Bubble leve Step 2 Ground The distance from the Base to the ground is decided according to the local regulations Ø0.47 in./12 mm Ø0.24 in./6 mm for **Base Support** for Base Support > 3.54 in./ 90 mm > 1.97 in./ 50 mm (1) Concrete Wall (2) Solid Wood Wall


NOTICE!

• The bubble level on the transverse plate can be used as an auxiliary tool. Additionally, please prepare a spirit level to measure whether the plate is even or not.


- c) Secure the assembled transverse plate on the wall.
- (1) Place the assembled Transverse Plate and Base Support to the wall (or solid wood wall);
- (2) Attach screws to the holes:
- In the case of the concrete wall, attach the M8*85 Expansion Screw (x 4) to the holes but be sure not to tighten (Torque: 10 N·m);
- Or, in the case of solid wood wall, attach M8*88 Self-tapping Screw (x 4) to the holes but be sure not to tighten (Torque: 10 N·m):
- (3) Check whether the cylindrical plastic bubble level is horizontal;
- (4) Hammer Expansion Screws with a rubber mallet (expect solid wood wall), and tighten it with torque wrench.

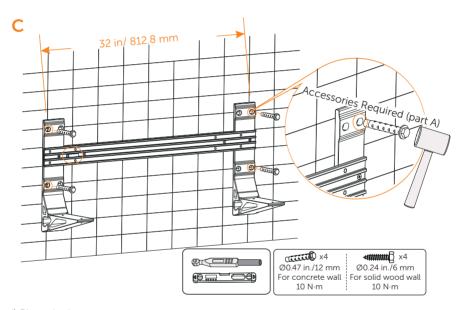

 - d) Place the base.
- (1) Remove the dust cover.




(2) Place Base on the Base Support and secure both left and right sides with screws (4 \times M5*20 countersunk screw) [Accessories Rrequired (part C)] (Torque: 2.2-2.5 N·m).

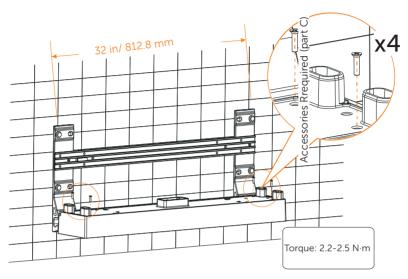


e) Make sure that each connecting pole of the battery module or base is well pluged into the slot of the next battery module which is on the bottom of the module.




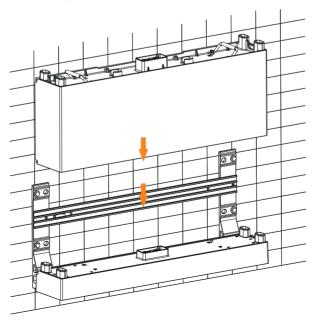

f) Mount the fixing plate (2 holes) [TP-HS50 (part G)] using M5*10 cross screw [TP-HS50 (part E)], and secure M5*10 screws (2 for each side) to connect Base and Battery Module.

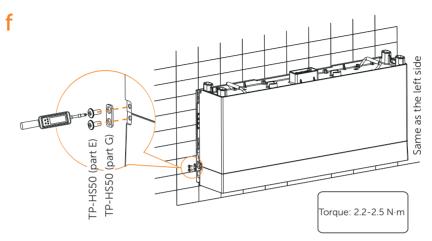


g) Place two battery modules in turn, and secure both left and right sides with screws $(4\times M5*10 \text{ countersunk screw})$.

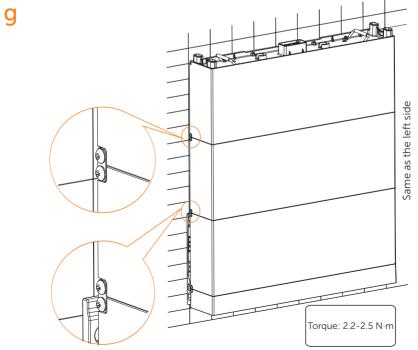


NOTICE

- In the case of the concrete wall, please perform the following steps strictly.
- In the case of the solid wood wall, please go directly to step j.
- h) Mount the bracket of the battery module.
- (1) Attach M5*10 screw [TP-HS50 (part E)] through the platen [TP-HS50 (part F)] to Wall Bracket but be sure not to tighten;
- (2) Place such Wall Bracket [TP-HS50 (part A)] to the wall, align its holes to the holes on the Battery Module, and use a spirit level to measure the Wall Bracket to ensure it's even;
- (3) Accurately mark the location of the Wall Bracket on both sides with a pen;
- (4) Draw circles according to the actual stub spacing;
- (5) Remove the Wall Bracket, and then drill the two holes (at least 3.54 in./90 mm) by a drill (drill bit: Ø0.39 in./10 mm, at least 9.84 inch/250mm long).

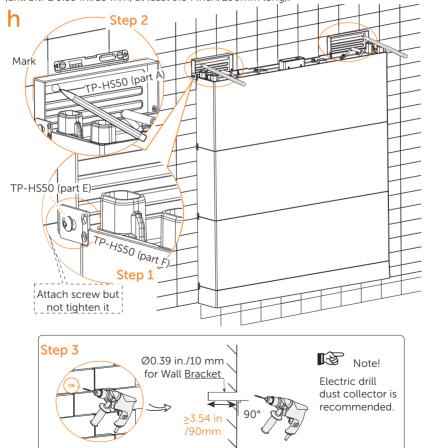

CAUTION!


- Please re-mount the dust cover to the battery module before drilling holes to avoid dust falling into the interface and do remember to remove the dust cover again after the installation wall bracket completed.
- i) Place expansion bolts into the two holes.

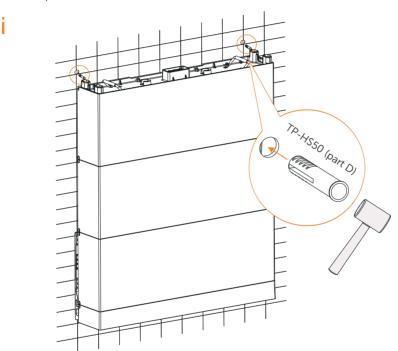

NOTICE


• In the case of the solid wood wall, the Expansion Bolt is not required to be installed.

j) Place the Wall Bracket on the wall where the mark is drawn previously, and then secure the Wall Brackets on the wall using M6 Tapping Screws (\times 2) and Washers [TP-HS50 (part B and C)] (Torque: 6-8 N·m).

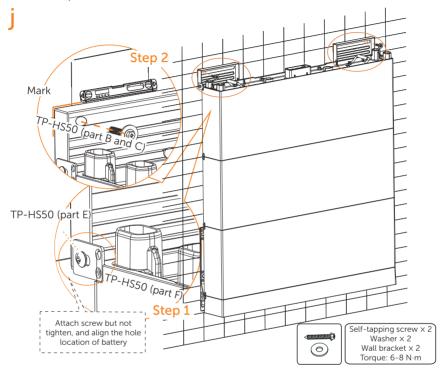


k) Let the platen [TP-HS50 (part F)] down and place the fourth battery module.



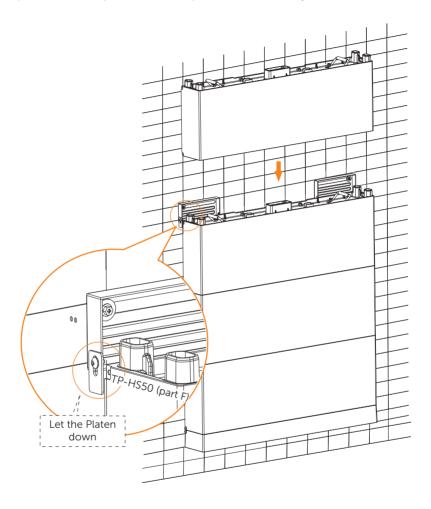


I) Fix the fixing plate (3 holes) [TP-HS50 (part F)] on both sides of battery module using M5*10 cross screw [TP-HS50 (part E)], and then tighten M5*10 screws.

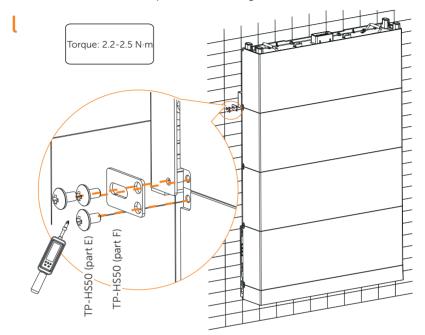

NOTICE

- In the case of the concrete wall, please perform the following steps strictly.
- In the case of the solid wood wall, please go directly to step m-(7), and the Expansion Blot is not required to be installed.
- m) Mount the wall bracket for the four battery module and BMS.
- (1) Attach M5*10 screw through the platen [TP-HS50 (part F)] to Wall Bracket but be sure not to tighten;
- (2) Place such Wall Bracket to the wall, align its holes to the holes on the Battery Module, and use a spirit level to measure the Wall Bracket to ensure it's even;
- (3) Accurately mark the location of the Wall Bracket on both sides with a pen;
- (4) Draw circles according to the actual stub spacing;
- (5) Remove the Wall Bracket, and then drill the two holes (at least 3.54 in./90 mm) by a drill (\emptyset 0.39 in./10 mm):
- (6) Place Expansion Bolts:
- (7) Secure Wall Brackets using M6 Tapping Screws and Washers (Torque: 6-8 N·m). Refer to the Steps e, f, g and h.

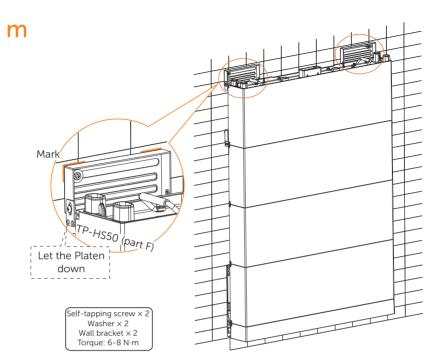


NOTICE

• Electric drill dust collector is recommended.

/ CAUTION


• Please re-mount the dust cover to the battery module before drilling holes to avoid dust falling into the interface and do remember to remove the dust cover again after the installation wall bracket completed.

n) Remove the bottom dust cover of BMS and place the BMS on the top. Fix the fixing plate (3 holes) on both sides of battery module using M5 $^{*}10$ cross screw, and then tighten M5 $^{*}10$ screws.

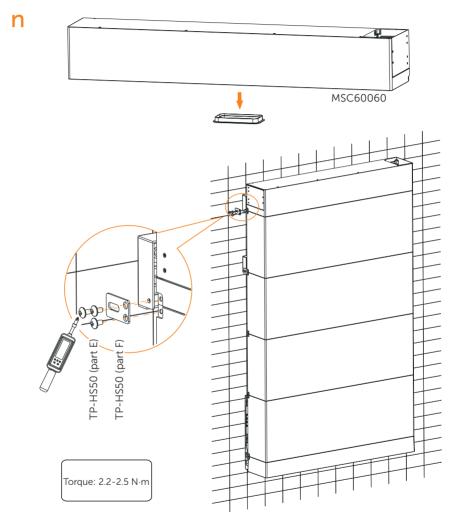


Step 2: Mount the inverter

- a) Two M4 holes are reserved on the BMS for fixing the bracket of the inverter.
- Screw M4 screws [Inverter (part L)] through the fixing plate [Inverter (part E)] to pre-fix the bracket on the BMS but be sure not to tighten.
- Hold the bracket firmly to the wall surface.
- Tighten the M4 screws to fix the bracket on the BMS.

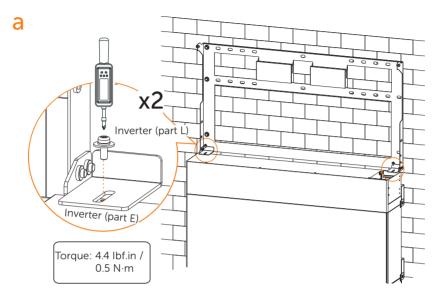

b) Use the bracket as the template to mark the screw hole location on the wall.

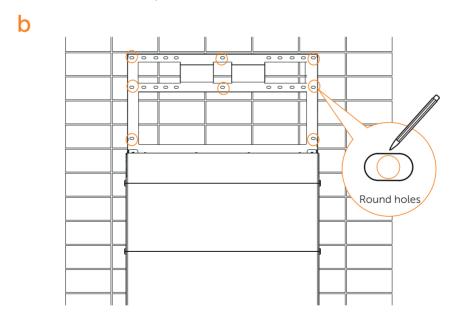


c) Unscrew the two M4 screws to disassemble the bracket. Drill holes with power drill, and make sure the holes are deep enough (2.16 in / 55 mm) to support the inverter.

NOTICEL

• The figure below is only used for showing the depth and location of holes. Make sure the holes are in the center of each stud and keep at least 1.49 in / 38 mm away from the edge of concrete bricks or studs before marking holes.




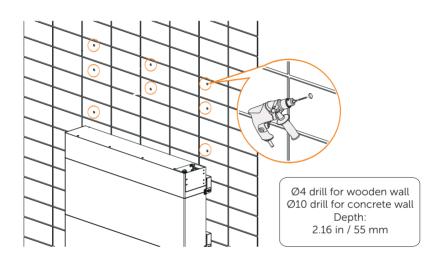


!\ CAUTION!

• Remove the screws on the bracket and disassemble the bracket before drill holes.


d) Insert the expansion tube [Inverter (part J)] into the hole and use rubber hammer to knock the expansion tube into the wall; (It can be ignored in case of wooden wall.)

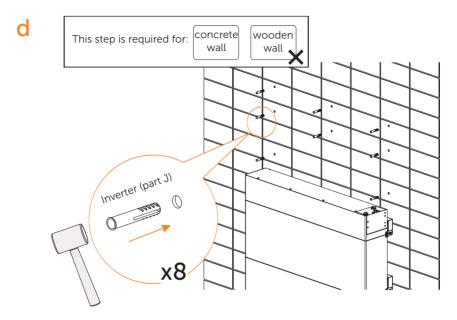


e) Align the bracket over the holes and re-fix the bracket on the BMS with screws [Inverter (part L)]. And screw the tapping screw [Inverter (part H)] through the washer [Inverter (part I)] and secure the bracket with tapping screws. Please hold the bracket firmly to the wall surface before fixing it.

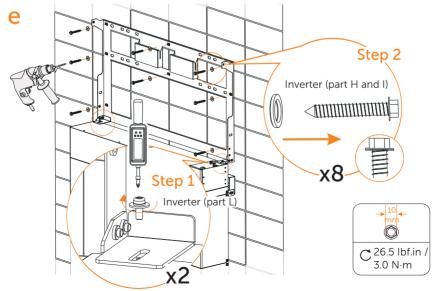

f) Place the inverter to be seated on the corresponding position of the bracket. As A1-HYB-G2 series inverters are heavy, weigh 75 lbs / 34 Kg. They should be lifted up by two persons and placed carefully onto the bracket. Then adjust the inverter to be centered on the whole system;

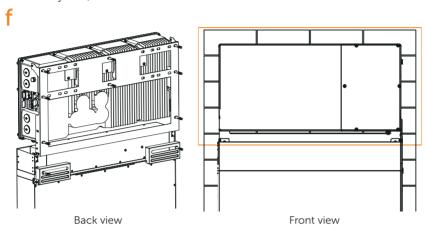


g) Place the protective guard [Inverter (part F)] on the correct position of battery's BMS prior to the wiring connection between inverter and battery and fix it with the inverter bracket with M5 screws [Inverter (part C)].

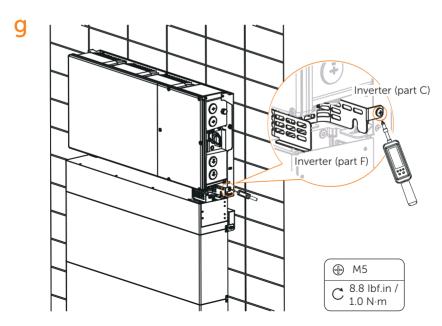



Open the wiring box cover to complete all the wiring connection.

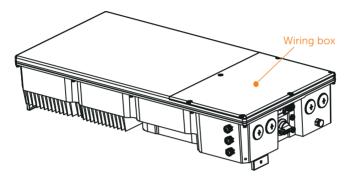



NOTICE

• For detailed wiring connection, please refer to "8 Wiring Connection on the Inverter".


h) Pre-mount the fixing plate with screws [Inverter (part C)] on the two sides of metal cover and mount the metal cover on the inverter. Please make sure the four dowel pins are inserted into the holes of BMS and adjust the whole system (inverter and battery) to be leveled.



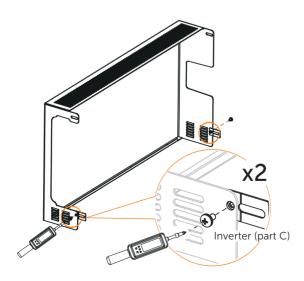

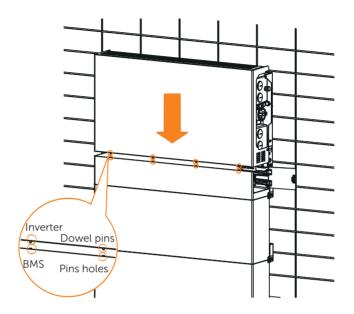


i) Fix the metal cover with six M5 screws [Inverter (part C)].

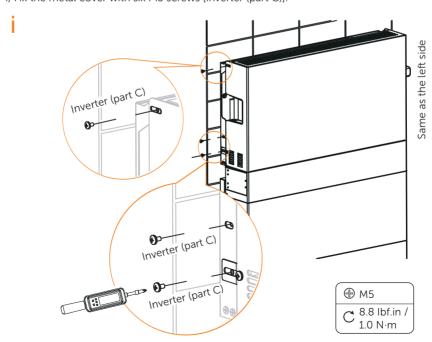

Step3: Mount the BI PRO

a) Use the perforating paper as a template to mark the screw hole location on the wall; And drill nine holes on the wall.

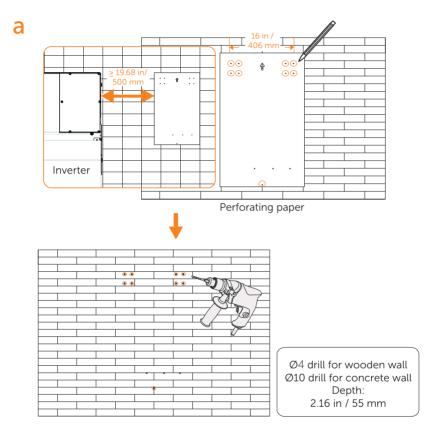


NOTICE

• For solid concrete wall, please use Ø10 drill.


NOTICE

• The inner-side hole of the bracket is 12 in / 305 mm.

b) Use mallet to knock the nine expansion tube [Backup Interface (part H)] into wall (This step can be ignored in case of wooden wall).

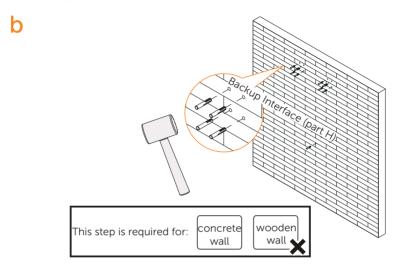


c) Secure the bracket on the wall with tapping screw [Backup Interface (part F)] and washer [Backup Interface (part G)] using torque wrench. Please hold the bracket firmly to the surface of the wall when fixing bracket.

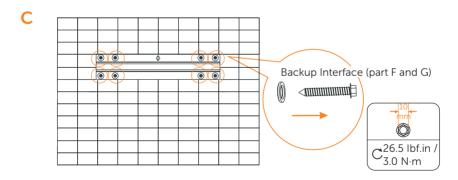


d) Hang the BI PRO on the bracket. Please make sure the cleat is well seated on the bracket.



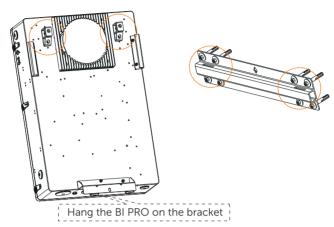


e) Secure the BI PRO by screwing in the tapping screw with washer on the bottom of BI PRO.



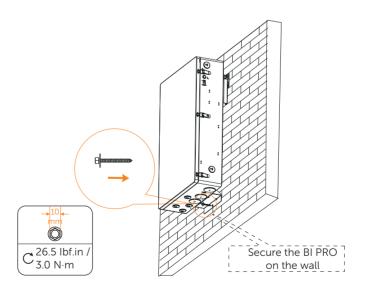



Open the door of Backup Interface and remove the dead front to complete all the wiring connection.

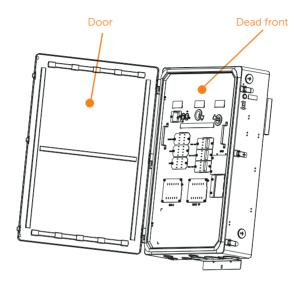


NOTICE

• For detailed wiring connection, please refer to "9 Wiring Connection on the BI PRO".

Drill a hole in the back (Not recommended)


a) These three holes correspond to the holes below the perforated paper.



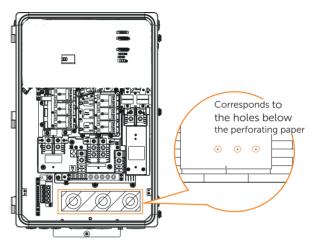

b) Drill the hole with a hole cutter. Choose 1 inch or 2 inch size (Metal chips must be cleaned after drilling).



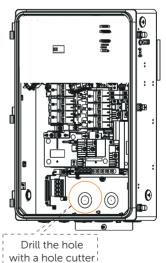


Choose 1 inch or 2 inch size (Metal chips must be cleaned after drilling)

c) Lock nut, waterproof gasket(outside), conduit.

NOTICE!

• Prohibit the flow of water inside the tubing water into the machine!

C

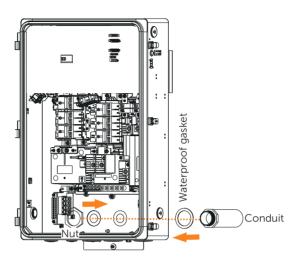

d) The top of the nut and contact surface of the threads must be cleaned after locking the nut, as well as the contact surface between the nut and the box.



NOTICE

• Drilling a hole in the wall is required before cutting a hole in the rear. To guarantee easy installation of the conduit and sealing with the chassis, the hole's size must be greater than the conduit's outside diameter.

8 Wiring Connection on the Inverter

8.1 Overview of All Electrical Wiring Methods

 
All electrical wiring will be done in the wiring box, and all electrical wiring methods are similar. Therefore this section will introduce all electrical wiring steps and requirements.

· Opening the wiring box cover

! WARNING!


 Before inverter wiring connection, Make sure no live voltages are present on PV input and AC output circuits, and make sure that the DC switch is in "OFF" position, meanwhile, the breaker of battery is in "OFF" position.

Step 1: Turn DC switch to "OFF" position. Note that the cover cannot be removed when the DC switch is in "ON" position.



Step 2: Make sure the breaker of battery is in "OFF" position.


Step 3: Remove the 6 cover screws using Allen key, then disassemble the cover.

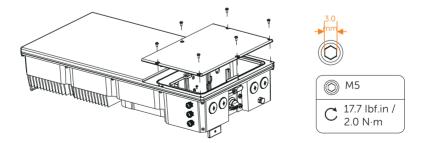

• Removing wiring box waterproof plugs

A1-HYB-G2 series inverter is equipped with four 1 inch conduit fittings which are used for electrical wiring access. Four waterproof plugs have been installed on the inverter at the factory. Before wiring connection, these waterproof plugs should be removed by the operator.


- **Step 1:** Remove the waterproof plugs by placing a flat blade screwdriver in the slot on the waterproof plug face and turning while gripping the nut on the inside of the enclosure to ensure it does not slip.
- **Step 2:** Unscrew the nut from the waterproof plug and slip the conduit plug out of the waterproof opening.

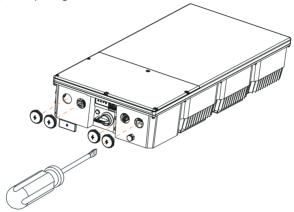

· Conduit installation


Operator should use the conduits and plugs with standard size which must fit with the holes on the right side of the inverter. Conduit fittings need to be water tight, and an insulated type is preferred.

Once conduit and fittings are installed, wires should go through the conduit and be locked into the corresponding terminals.

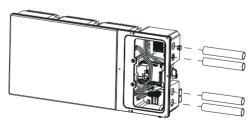

• Cable entry of inverter


A conduit fitting or cable gland must be used when wiring connection. The cable is routed from the right side of inverter.

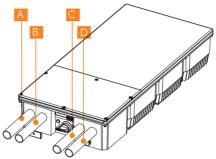

Item	Type of Cable Entry
А	Conduit plug for AC connection
В	Conduit plug for communication connection
С	Conduit plugs for PV connection
D	Conduit plugs for PV connection

8.2 Power Connection

- General steps of connecting electrical wirings to terminals
- **Step 1:** Choose the appropriate wire according to the specific connection.
- Step 2: Remove 0.47 in / 12 mm of insulation from the end of DC wire and the AC wire.
- Step 3: Insert the end of wires into the Cord End Terminal, and then use the crimping tool to crimp the Cord End Terminal tightly (the shape will be square). Please determine whether Cord End Terminals need to be installed based on the selected wire type and the regulations of the National Electrical Code ANSI/NFPA 70
- **Step 4:** Use the slot screwdriver to compress the orange button of the terminals. Then insert stripped wires into the terminal and ensure that all conductor strands are captured in the terminal.
- **Step 5:** Loosen the slot screwdriver.
- **Step 6:** For the specific requirement of power cable, please refer to "Appendix A: Wiring and Breaker Requirement".

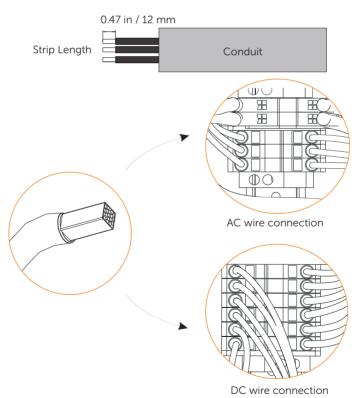

8.2.1 PV Connection

/ CAUTION!

• Never reverse the polarity of the array string cables as it can cause damage to the inverter. Always ensure correct polarity.

! WARNING

Select PV modules with excellent functioning and reliable quality. Open-circuit
voltage of module arrays connected in series should be less than the inverter Max.
DC input voltage of 550 V. The inverter warranty is VOID if the DC input voltage is
exceeded.

! WARNING!

• Ensure no live voltages are present on the PV input and AC output circuit, and verify that the DC disconnect, AC disconnect, and dedicated AC circuit breaker are in the "OFF" position before installation.

♠ WARNING!


 Use dark, opaque sheets to cover the PV solar panels before performing any wiring or connection.

/ WARNING!

 Power is fed from more than one source and more than one live circuit. Note that all DC and AC terminals may carry current even without connected wires.


! WARNING!

• Ensure maximum protection against hazardous contact voltages while assembling PV panel installations. Both the positive and negative leads must be strictly isolated electrically from the protective ground potential (PE).

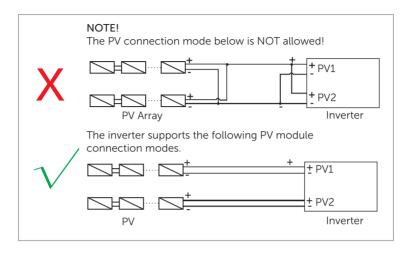

• PV String Connection

A1-HYB-G2 Series inverter can be connected with PV modules in series with 2 MPPTs for A1-HYB-3.8K-G2, A1-HYB-5.0K-G2 and A1-HYB-6.0K-G2, 3 MPPTs for A1-HYB-7.6K-G2.

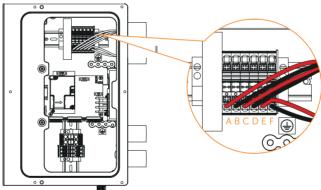

A: PV1 Positive terminal

C: PV2 Positive terminal

E: PV3 Positive terminal

B: PV1 Negative terminal

D: PV2 Negative terminal

F: PV3 Negative terminal

8.2.2 Grid Connection


/!\ CAUTION!

The installer is responsible for providing overcurrent protection. To reduce the risk
of fire, only connect to a circuit provided with overcurrent protection in accordance
with the National Electrical Code, ANSI/NFPA 70.

The connection procedure will vary depending on the grid configuration.

The following diagram provides an overview of the compatible grid configurations of which voltage limit, frequency limit and conductors have to be connected to the inverter to comply with the grid configuration.

Public grid configuration allowed:

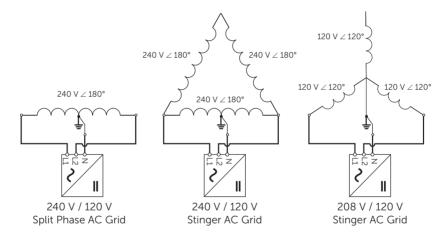


Grid terminal connection on the side of inverter



DANGER - HIGH VOLTAGE!

• For the specific requirement of power cable, please refer to "Appendix A: Wiring and Breaker Requirement".

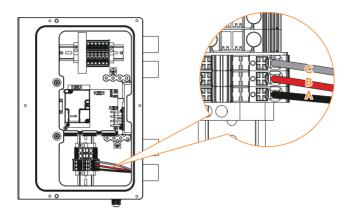

A: L1 cable B: L2 cable C: N cable

AC circuit breaker requirements

The AC circuit breaker is required to protect each AC line (L1 and L2) of the HYB series inverter. The circuit breaker should be able to handle the rated maximum output voltage and current of the inverter.

Refer to the table below to determine the specific circuit breaker in order to avoid potential fire hazards. The AC circuit breaker selection and installation must follow the National Electrical Code(NEC). ANSI / NFPA 70 or local electrical codes.

Inverter model	Description	Source
A1-HYB-3.8K-G2	2-pole, 20 A, 240 Vac	
A1-HYB-5.0K-G2	2-pole, 30 A, 240 Vac	can be purchased from
A1-HYB-6.0K-G2	2-pole, 35 A, 240 Vac	manufacturer
A1-HYB-7.6K-G2	2-pole, 40 A, 240 Vac	

NOTICE

If the system is equipped with BI PRO, connect another end of AC cable to BI PRO.
 Please refer to "9 Wiring Connection on the BI PRO".

8.2.3 Battery Connection

 
! CAUTION

Never reverse the polarity of the battery cables as this will result in inverter damage.
 Always ensure correct polarity.

Charging and Discharging system of A1-HYB-G2 series inverter is designed for high-voltage lithium-ion battery.

As a Lithium-ion battery will be connected with HYB series inverter, the battery communication should be compatible with A1-HYB-G2 series inverter and the BMS must be connected between inverter and battery.

Battery connection diagram for Lithium-ion battery



BAT terminal connection



DANGER - HIGH VOLTAGE!


• Make sure the breaker of battery is in "OFF" position.

NOTICE!

- Before wiring, the guards (if any) shall be removed from connectors.
- Before wiring,
 - 1. Unscrew the cap at BMS clockwise:
 - 2. Unscrew the screws at BAT+ and BAT- respectively.

The parts where BMS needs to wire are as follows:

- 1. The BAT+ (red), communication cable and BAT- (black) cables have been already connected on the inverter's side. Only connecting the other end of the cables to the corresponding port of BMS is needed.
- 2. Make sure that both ends of the cables are connected correctly to the connector on the right side of the BMS module.

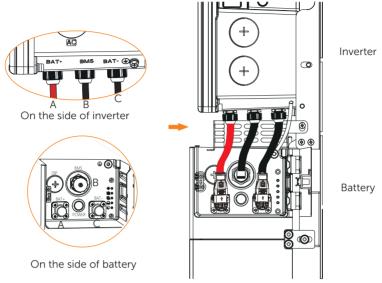

A: BAT+ B: Communication connection C: BAT-

NOTICE


• Don't violently remove cables when they are locked.

8.3 Ground Connection

Please additionally earth the inverter to the enclosure of a second earthing or equipotential bonding if it is required by local safety. This prevents electric shock if the original protective conductor fails.

Ground terminal

Ground terminals are as follows. Terminals on bus-bar A and B are for AC and DC ground connection. Ground terminal C is for ground connection between inverter and battery.

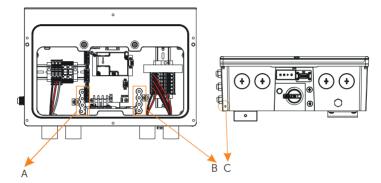


• Steps of Ground Connection


- a) Strip the insulation of conductor by wire stripper;
- b) Pull the heat-shrink tubing over the PE cable and insert the stripped section into the grounding terminal;

NOTICE!


• For the specific requirement of power cable, please refer to "Appendix A: Wiring and Breaker Requirement".

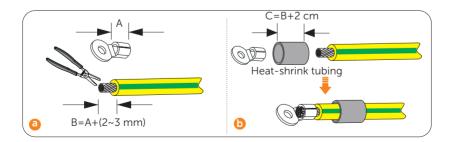

c) Crimp it with crimping tool, pull the heat-shrink tubing over the stripped section of the grounding terminal and use a heat gun to shrink it so that it can be firmly contacted with the terminal;

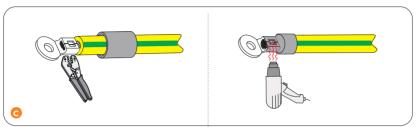

- d) Connect the ground cable to the inverter and fix it with M4 screw. When PV connection, please connect the ground cable to B bus-bars. When grid connection, please connect the ground cable to A bus-bars.
- e) Connect the ground cable between the inverter and battery with M5 screws. For easier connection, please connect the grounding cable on the BMS first.

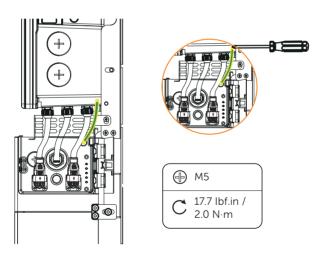

NOTICE

• Ensure to connect the ground cable.


8.4 Communication Connection

All communication cables will be done on the communication board which is in the wiring box. For the specific requirement of cable, please refer to "Appendix A: Wiring and Breaker Requirement".


8.4.1 Make Communication Connection to Another Inverter/BI PRO

• Inverter communication system diagram


Single inverter

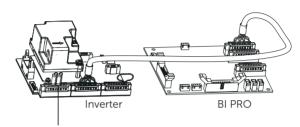


120-Ohm terminating resistor

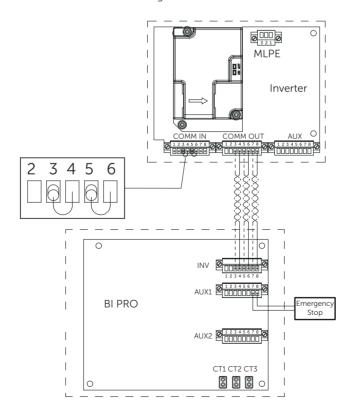

Multi-inverter

 

120-Ohm terminating resistor

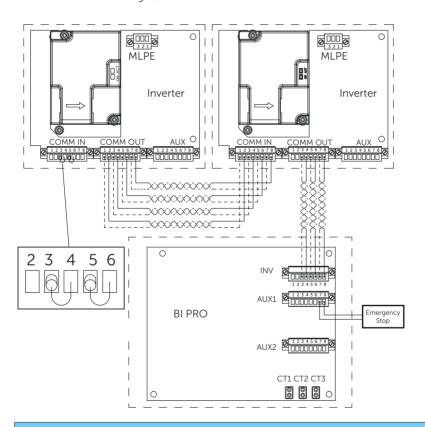


NOTICE

• In the first inverter in the communication chain, plug the 8-pin female block with the terminating 120-Ohm resistor into the 8-pin male block. Maximum four inverters can be communicated via communication cable.

· Connection steps of terminating resistor

- **Step 1:** The 120-Ohm resistor has been pre-installed on the 8-pin female block before leaving factory. Take it out from the accessory box.
- **Step 2:** Install the 8-pin female block with resistor to the COMM in male terminal by using slot screwdriver.

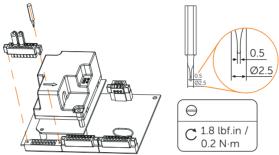

· Connection steps of communication wire

Step 1: A1-HYB-G2 series inverter supports to be connected with additional three inverters in maximum. Disassemble 8-pin female blocks prior to communication connection.

Step 2:

Communication connection between inverters:

Pin 1-Pin 6: Select the CAT5 or better (24-18 AWG), use diagonal plier to cut off two wires and leave six wires for connection. Remove 0.24 in / 6 mm of insulation from the end of the six wires.

Pin 7-Pin8: Select two 18-16 AWG wires and remove 0.24 in / 6 mm of insulation from the end of the two wires

Communication connection between inverter and BI PRO:

Pin 3-Pin 6: Select the CAT5 or better (24-18 AWG), use diagonal plier to cut off four wires and leave four wires for connection. Remove $0.24\ \text{in}$ / $6\ \text{mm}$ of insulation from the end of the four wires.

Pin 7-Pin8: Select two 18-16AWG wires and remove 0.24 in / 6 mm of insulation from the end of the two wires.

Step 3: Plug stripped wires into female terminal and ensure that all conductor strands are captured in the terminal.

Step 4: Screw down screw cap tightly.

Step 5:

Connection between inverters:

Plug the female terminal block into the COMM OUT male terminal block on the communication board of the first inverter and screw in each screw tightly. And plug another end of female terminal block into the COMM IN male terminal block on the communication board of the second inverter.


Connection between inverter and BI PRO:

Plug the female terminal block into the COMM OUT male terminal block on the communication board of the inverter and screw in each screw tightly. And plug another end of female terminal block into the INV communication terminal of BI PRO.

NOTICE

• For the specific communication terminal on the BI PRO, please refer to "9 Wiring Connection on the BI PRO".


Diagram for communication connection steps between inverters

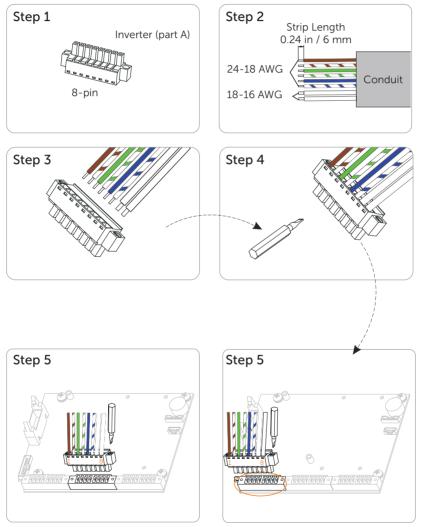

On the side of the first inverter

On the side of the second inverter

Diagram for communication connection steps between inverter and BI PRO

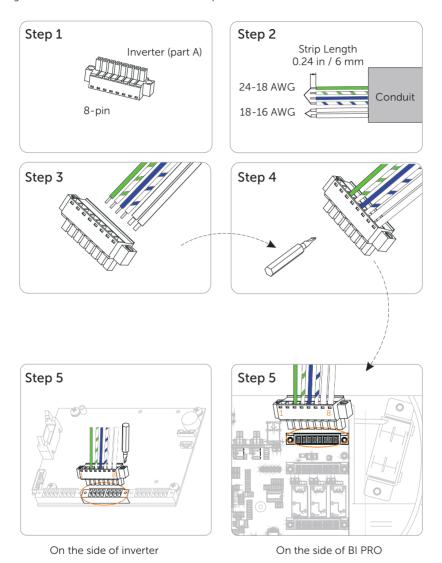

112

8.4.2 Emergency Stop Connection

Generally, Emergency stop is connected to backup interface to simultaneously command the whole system to become idle and enter a safe mode. While SolaX A1-HYB-G2 series inverter can be wired to include an emergency stop switch as well. Emergency stop connects to inverter only if no backup interface is equipped. Please refer to "Appendix B: Emergency Stop Connection Steps" for more details.

8.4.3 RGM (Meter X) Connection (Optional)

The RGM (Meter X) is used to get the information about the energy flow. If the Meter X has been purchased from SolaX, it will be pre-mounted inside the inverter before leaving factory.

8.4.4 External Electricity Meter (Meter Y) Connection (Optional)

The external electricity meter (Meter Y) will be integrated in the backup interface if Meter Y has been purchased from SolaX. It connects to inverter only if no backup interface is equipped in the whole system. Please refer to "Appendix C: Meter Y Connection Diagram" for more details about meter connection on the inverter.

8.4.5 RSD Transmitter Connection

The APsmart Rapid Shutdown System Transmitter-PLC-1P is part of a rapid shutdown solution when paired with APsmart signal receiver (RSD-S-PLC-A, RSD-D15-1000 or RSD-D-25-1000), a PV module rapid shutdown unit. While powered on, the Transmitter-PLC-1P sends a signal to the signal receiver to keep their PV modules connected and supplying energy. The signal receiver automatically enter rapid shutdown mode when the Transmitter-PLC-1P is switched off and resume energy production when power is restored to the Transmitter PLC-1P. This solution complies with NEC 690.12 specifications for 2017&2020 and supports the SunSpec signal for rapid shutdown.

NOTICE!

• The RSD has been integrated in the inverter before leaving factory.

NOTICE

• If an emergency stop switch is required, the customer needs to purchase and wire it.

8.4.6 Parallel Connection

A1-HYB-G2 series same-power inverters support up to 4 parallel connection, Unified EMS management function by the primary machine. The primary and secondary machines are interconnected via CAN and RS485 buses.

For detailed diagram, please refer to "Appendix D: System Wiring Diagram".

- 1) All parallel solutions must be equipped with BI PRO as standard, and A1-HYB-G2 AC direct parallel external power meter solution is not supported.
- 2) The EMS under grid parallel can support the same modes as the stand-alone EMS mode, including:
- Self-Use (default)
- Backup mode
- · Time of Use mode
- · Feed in Priority
- Demand mode
- · Constant power discharge mode

Concurrent Primary-Secondary role setting

- 1) All machines need to set parallel enable/ disable. Enabling parallel machine does not allow running standalone mode.
- 2) The Primary also needs to set the number of parallel machines.
- 3) Primary communication lost, system down waiting for human intervention to recover.
- 4) Loss of Secondary communication (CAN), the primary operates normally, but reports a "Loss of Secondary Communication Alarm". The lost Secondary stops and reports a parallel communication failure until the communication is restored and then tries to integrate into the system again.

For details, please refer to "Parallel Connection Guide".


8.4.7 Monitoring Connection (Optional)

The inverter is equipped with monitoring port which can collect data and transmit it to monitoring-website via an external monitoring data collector.

SolaX may provide several types of monitoring data collector, such as Pocket WiFi (Optional) and Pocket Pocket 4G V4.0-M (Optional). Purchase the product from supplier if needed.

Installation instructions

Remove the cover of monitoring port and plug the communication module into the port.

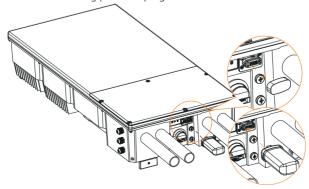

9 Wiring Connection on the BI PRO

! WARNING!

• To avoid shock hazard, never power on the system without a connection to Earth at BI PRO.


(!) CAUTION!

Before BI PRO wiring connection, please make sure the BI PRO is correctly wall-mounted and can be configured for cable entry at the bottom and sides of the enclosure.

Please open the door and remove dead front first.


Step 1: Break the buckle by hand.

1

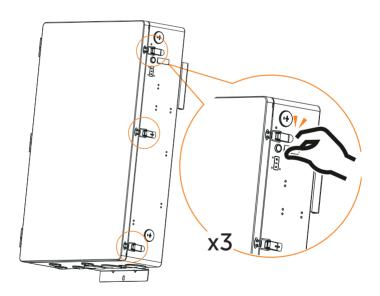


Step 2: Open the door.



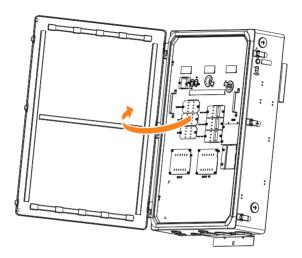


Step 3: Remove the door upwards.



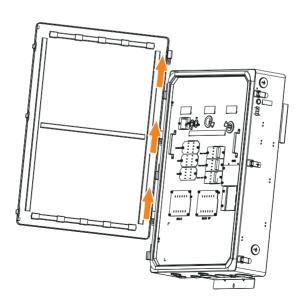


Step 4: Remove the dead front by unscrewing the seven screws with a screwdriver.



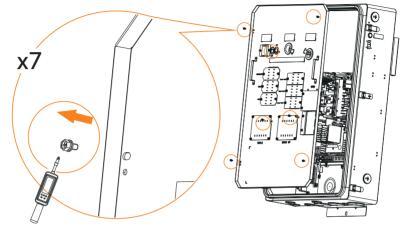

Unscrew the metal cover where circuit breakers are to be installed.

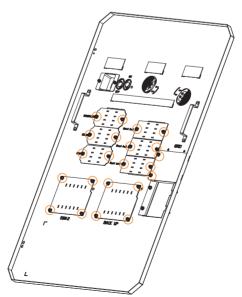


9.1 Install Breakers

Install a main breaker

For Service Equipment

The product is "SUITABLE FOR USE AS SERVICE EQUIPMENT". For this scenario,

- 1. The following main breaker accessory needs to be installed.
 - a. EATON main breaker b. Line side barriers
- 2. Loosen the original terminals; remove the plastic terminal block.
- 3. Install the hex support columns with a 10 mm socket and 12 kgf.cm torque.
- 4. Install and fasten main breaker with M4*12 screw, with a torque of 12kgf.cm.
- 5. To cover the main breaker with line side barrier.
- 6. Apply the marked as "SUITABLE FOR USE AS SERVICE EQUIPMENT".
- 7. Neutral is bonded to ground with "Bonding Jumper".
- 8. Apply the "SERVICE DISCONNECT" labels adjacent to appropriate circuit breakers.

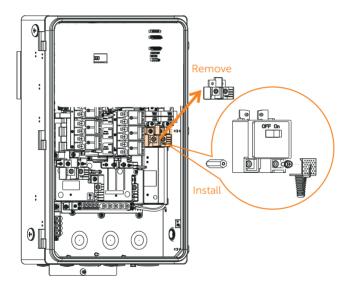

/!\ WARNING!

• Suitable for use with interconnected parallel electric power production sources.

/ WARNING!


 Suitable for use in accordance with Article 705 of the National Electrical Code, NFPA 70.

/ WARNING

 MAX. CONTINUOUS LOADS ON MAIN OR BRANCH CIRCUITS NOT TO EXCEED 80% OF THE RATINGS OF THE LISTED CIRCUIT BREAKERS.

! WARNING!

• This Panelboard is intended to be installed as Part of a System Where Alternate Power Sources are controlled by a Power Control System (PCS). Refer to Installation Instructions for additional details regarding the complete installation of the PCS. The setting of the PCS shall be considered the power source output circuit current.

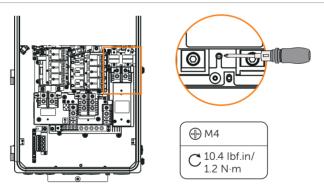


NOTICE

After installing the main breaker, lugs feed opposite bus.

For Subpanel

 Remove Neutral-Ground bonding strap from BI PRO if not installed as service equipment. Proper earth connection and Neutral-Ground bonding strap is required for safe operation of the system and for compliance with local code requirements.





NOTICE

 Please refer to "Appendix D: System Wiring Diagram" for specific wiring diagram of each solution.

Install branch circuit breakers

Step 1: Install the breaker.


Step 2: Use a Phillips screwdriver to tighten the self-tapping screws on the circuit breaker with a torque of 13 lb-in. (#5-20*2 7/8 in. self-tapping screw)

NOTICE

- Breaker and screws should be purchased separately.
- Back-feed breaker requires hold-down kit
- EATON Cat. No. BRHDK125.


NOTICE


- Install the following appropriate SE Barrier Kit for Service Entrance
- Main Breakers and Parallel Energy Source when required.
- #TICSR300 when using UL Type CSR, Main Breakers.

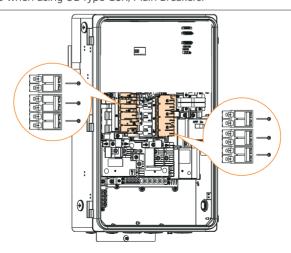

Paste labels

Paste the attached label in the appropriate place as follows.

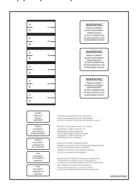

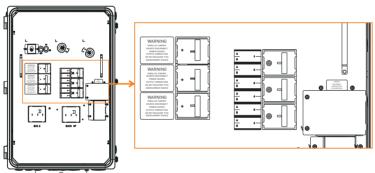

9.2 Make AC Connection to Inverter, Generator, Load and Grid

NOTICE!

 Before any wiring connection, the conduit must be installed according to the national and local requirement.

NOTICE

• For the specific conductor requirement of size and torque, please refer to "Appendix A: Wiring and Breaker Requirement".

∕!\ WARNING!


• The system supports to install four inverters in maximum. Never power on the system without a connection to Earth at the BI PRO.

! WARNING!

Incorrect wiring of AC conductors presents a risk of electrical shock or damage to the
equipment. Before powering on the system, ensure all the connections are correctly
made according instructions in this documents and in accordance with local wiring
codes and regulations.


General steps:

- **Step 1:** Route AC wires through the conduit. Strip the ends of the wires and plug the corresponding terminal lugs.
- **Step 2:** Use an appropriate torque tool to tighten the lugs according to "Appendix A: Wiring and Breaker Requirement".
- **Step 3:** Use copper wire only.
- Connect the generator conductors to BI PRO

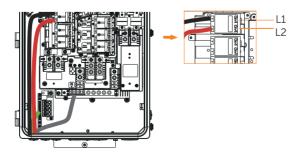


NOTICE

- For the specific requirement of cable and torque, please refer to "Appendix A: Wiring and Breaker Requirement".
- Connect the solar conductors to BI PRO

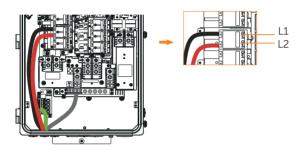

NOTICE!


- For the specific requirement of cable and torque, please refer to "Appendix A: Wiring and Breaker Requirement".
- Connect the ESS 1 conductors to BI PRO

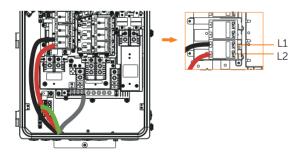


NOTICE

• For the specific requirement of cable and torque, please refer to "Appendix A: Wiring and Breaker Requirement".

• Connect the ESS 2 conductors to BI PRO

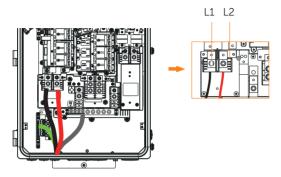

Before installing a main breaker

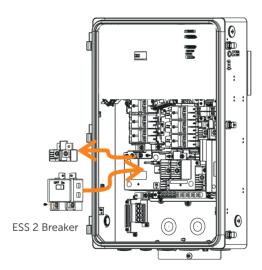


Installing a main breaker

NOTICE


• After installing the main breaker, lugs feed opposite bus.

• Connect the smart load conductors to BI PRO

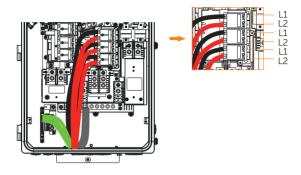

NOTICE


- For the specific requirement of cable and torque, please refer to "Appendix A: Wiring and Breaker Requirement".
- Connect the non-backup conductors to BI PRO

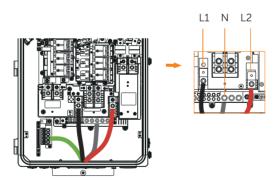


NOTICE

• For the specific requirement of cable and torque, please refer to "Appendix A: Wiring and Breaker Requirement".

• Connect the backup conductors to BI PRO

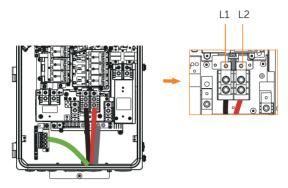

Before installing a main breaker

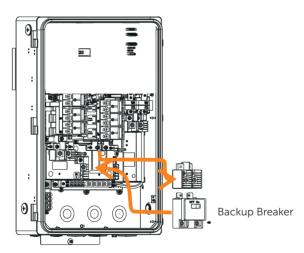

Installing a main breaker


NOTICE

• After installing the main breaker, lugs feed opposite bus.

9.3 Make Communication Connection

• Overview of all communication cables connection methods

All communication cables will be done on the communication board of BI PRO. This section will introduce the steps and requirements for all communication cables connections.

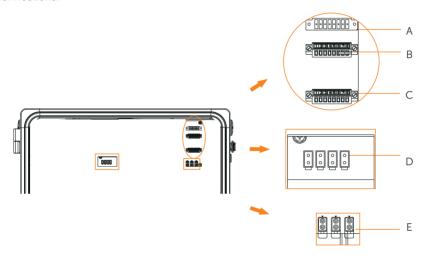

Item Terminals		Port Pin	
А	INV communication terminal (for communication between inverter and BI PRO)	Pin 1: RESERVE	
		Pin 2: RESERVE	
		Pin 3: CAN_L	
		Pin 4: CAN_H	
		Pin 5: RS485_BI_A	
		Pin 6: RS485_BI_B	
		Pin 7: +12V	
		Pin 8: GND	

Item	Terminals	Port Pin	
		Pin 1: DRY_GEN	
		Pin 2: GND_GEN	
	AUX1 terminal (for	Pin 3: RS485_RESERVE_A	
	communication between	Pin 4: RS485_RESERVE_B	
В	generator and BI PRO, Emergency stop and BI	Pin 5: RESERVE	
	PRO)	Pin 6: RESERVE	
		Pin 7: STOP_NO+	
		Pin 8: STOP_NO-	
		Pin 1: NO_1	
		Pin 2: COM_1	
		Pin 3: NC_1	
		Pin 4: NO_2	
С	Reserved	Pin 5: COM_2/3	
		Pin 6: NC_2	
		Pin 7: NO_3	
		Pin 8: NC_3	
	CT I 1 A harmaniar al	Pin 1: CT L1A+	
	CT L1A terminal	Pin 2: CT L1A-	
	CT I 1D to moving all	Pin 1: CT L1B+	
Б	CT L1B terminal	Pin 2: CT L1B-	
D	CT L 2A townsing I	Pin 1: CT L2A+	
	CT L2A terminal	Pin 2: CT L2A-	
	CT L2B terminal	Pin 1: CT L2B+	
	CT LZB terminat	Pin 2: CT L2B-	
	CT1 terminal	Pin 1: CT 1+	
E	C11 terminal	Pin 2: CT 1-	
	CT2 terminal	Pin 1: CT 2+	
		Pin 2: CT 2-	
	CT3 terminal	Pin 1: CT 2+	
		Pin 2: CT 2-	

Communication connection between inverter and BI PRO

Please refer to "8.4.1 Make Communication Connection to Another Inverter/BI PRO" for the detailed steps of connection.


• Communication connection of Emergency stop and generator

The Emergency stop and generator share the same AUX1 port.

Install optional Emergency stop

The BI PRO can be wired to include an external emergency stop switch that can switch off the whole system.

- **Step 1:** Remove the factory-installed jumper from Pin 7 and Pin 8 of the 8-position "AUX1" connector inside the BI PRO.
- **Step 2:** Use minimum 24 AWG conductors (maximum 18 AWG) for Emergency stop to connect Pin 7 and Pin 8.
- **Step 3:** Confirm the system will cease operation when the switch is open.

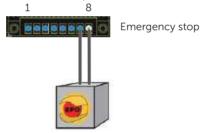


NOTICE!

- Turn the switch to OFF (open) position: The whole system will go to idle.
- Turn the switch to ON (closed) position: The whole system will resume shortly.

Install generator

- **Step 1:** Use the same 8-Pin female terminal of Emergency stop.
- **Step 2:** Use minimum 24 AWG conductors (maximum 16 AWG) for generator to connect Pin 1 and Pin 2 (Pin 7 and Pin 8 for Emergency stop). The rest pins are reserved.
- **Step 3:** Remove 0.24 in / 6 mm of insulation from the end of the four wires.
- **Step 4:** Insert the stripped wires into female terminal and ensure that all conductor strands are captured in the terminal. and plug the female terminal to AUX1 port.

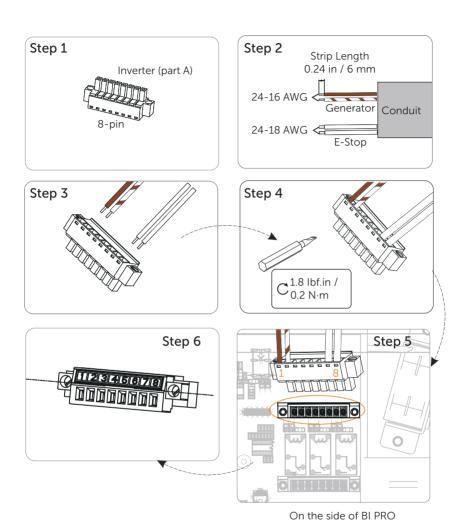


Dry contact switch

The GEN dry contact switch is used as a controller for an AC generator with a remote start function. The GEN dry contact switch may be used to start the generator by closing the appropriate circuit.

NOTICE

• When using generation remote start function, the generator must be connected to the BI PRO's GEN terminals.

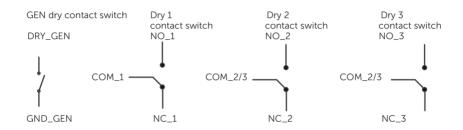

Item	Value
GEN dry contact switch current/voltage rating	2 A / 30 VDC
DRY 1 contact switch current/voltage rating	3 A / 30 VDC
DRY 2 contact switch current/voltage rating	3 A / 30 VDC
DRY 3 contact switch current/voltage rating	3 A / 30 VDC

The dry 1 contact switch / dry 2 contact switch / dry 3 contact switch can be used to implement Load Shed function.

Load Shed function can perform load management. It is intended to turn off designated loads during low battery periods to conserve remaining battery power.

· Connecting external CTs

CT placement locations include the following:

A set of CTs (CT L1A, CT L2A, 200A) has been built in the BI PRO. In some application scenarios, it can measure both load and generation and there is no need to connect external CTs. But in some application scenarios, such as Partial-Home Backup solution, connecting external CTs (CT L1B, CT L2B) to measure total current both load and generation is needed. In addition, if the site includes solar equipment, a solar CT is placed after the solar inverter to measure the solar output.

CT L1A terminal and CT L1B terminal have been connected in parallel on PCB. CT L1A and CT L1B are used to measure total current both load and generation of the same phase L1.


CT L2A terminal and CT L2B terminal have been connected in parallel on PCB. CT L2A and CT L2B are used to measure total current both load and generation of the same phase L2.

NOTICE!

 For detailed information about how to configure external CT, please refer to "BI PRO CT configuration for A1-ESS-G2" by scanning the QR code.



Lock the dead front and close the door.

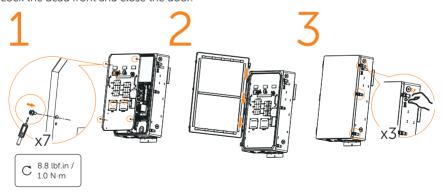

10 Close Wiring Cover and Turn on the System

10.1 Check Below Steps before Turn on the System

- **Step 1:** Ensure the system is properly mounted.
- **Step 2:** Ensure all grounding wire to the grounding bus-bar are connected properly.
- **Step 3:** Ensure all the communication wirings are connected properly.
- **Step 4:** Ensure all the DC wirings and AC wirings are completed.
- **Step 5:** Ensure the CT is connected properly.
- **Step 6:** Ensure the battery is connected properly.
- **Step 7:** Ensure all loads are connected properly, and that the combined ratings of all backed-up loads are within the rating capacity of the system without grid support.
- **Step 8:** Ensure the PV arrays are connected properly. Ensure the battery has been turned off, and all the indicator light of the battery are off.

10.2 Turn on the System

- **Step 1:** Before closing any wiring cover, please take photos of the completed wiring in the inverter, battery and BI PRO.
- **Step 2:** Install the wiring box cover of the inverter and secure it firmly with the original screw
- Step 3: Install the internal cover of the BI PRO.
- Step 4: Switch on the BI PRO power button (turn to "AUTO").
- **Step 5:** Switch on the AC circuit breakers for the BI PRO and inverter.
- **Step 6:** Make sure that the battery has been turned off, and all the indicator light of the battery are off.
- **Step 7:** Switch on the circuit breaker of battery.
- **Step 8:** Switch on the PV DC switch of the inverter (turn to "ON" position).
- **Step 9:** Press the battery POWER button to start the battery.
- Step 10: Install the outer cover of the BI PRO.
- **Step 11:** The system will start up. Check the status of indicators on inverter, battery and BI PRO for more information on the codes displayed for error and warning messages, refer to "12 Troubleshooting".
- Step 12: Download and configure the APP.

NOTICE!

Before you switch on the circuit breaker of the battery, make sure that the battery
has been turned off, and all the indicator light of the battery are off. If the battery has
been turn on, then you switch on the circuit breaker of the battery, the inverter and
the battery may be damaged.

NOTICE

 
- If the left indicator do not turn green please check the below points:
 - All the connections are correct.
 - All the external breakers are switched on.
 - The DC switch on the inverter is in the "ON" position.

10.3 Shut Down the System

- **Step 1:** If the system is on, press the inverter POWER button for 1 second to turn off the inverter.
- **Step 2:** Switch off the PV DC switch of the inverter (turn to "OFF" position).
- **Step 3:** Press the battery POWER button to turn off the battery.
- **Step 4:** Switch off the circuit breaker of the battery.
- **Step 5:** Switch off the AC circuit breakers for the BI PRO and inverter.

11 Indicator Light and Button

Indicator light and button of inverter





Fault LED 1 and Fault LED 2



fault occurs.

LED1 flashes green (2s on, 2s off) and LED2 is red when ground fault occurs.

LED1 flashes green (0.5s on, 0.5s off) and LED2 is off when PV voltage fault occurs.

LED1 flashes green (2s on, 2s off) and LED2 is off when Grid error occurs.

LED1 flashes green (0.5s on, 0.5s off) and LED2 flashes red (0.5s on, 0.5s off) when firmware upgrading is ongoing.

LED1 is green and LED2 is red when other fault occurs.

LED1 is off and LED2 is off when no fault occurs.

LED1 flashes green (0.5s on, 0.5s off) and LED2 is red when arc



 
Operation LED (Free / Secondary)

 Green when the inverter is in normal status or in backup status.
 Flashing green (1s on, 1s off) when the inverter is in waiting or checking status.
 Off when the inverter has a fault.



Operation LED (Primary)

 Green for 2s and then quick flashing green for 1s (0.2s on, 0.2s off) when the inverter is in normal or backup status.
 Flashing green for 2s (1s on, 1s off) and then quick flashing green for 1s (0.2s on, 0.2s off) when the inverter is in waiting or checking status.
 Off for 2s and quick flashing green for 1s (0.2s on, 0.2s off) when





BAT LED

 Green when the battery communication is normal and working.
 Flashing green (1s on, 1s off) when the battery communication is normal and the battery is in idle status.
 Off when the battery does not communicate with inverter.

All LEDs

All LEDs flash (0.5s on, 0.5s off) when firmware upgrading has been completed but the U drive is still connected

All LEDs will be back to the normal state if the U drive is unplugged after the upgrading finished.



Inverter power button

Press the button for 0.5 second: Clear EPS OverLoad Fault / EPS Bat Power Low / $BI_TransformerImbalanceHighFault$ / $BI_VoltImbalanceFault$ / BatBreakOpen Fault.

Press the button for 1 second: Turn on the inverter if it has been turned off. Press the button for 1 second: Turn off the inverter if it has been turned on. The control circuitry remains powered up.

Press the button for 5 seconds: Run arc self-test if there is no arc fault. Press the button for 5 seconds: Clear arc fault if arc fault occurs.

Indicator light and button of battery



Working:

When charging, status light will remain on solid green light; when discharging, status light will flash green every 0.5 sec.

Fault:

Status light begins on solid red; 10 mins later, the status light will flash red for 1 sec and turn off for 4 sec, and the SOC power indicators will flash to indicate a malfunction (for details, refer to the User Manual).

Upgrade:

Status light flashes green, red and yellow; SOC power indicators flash blue every 0.2 sec.

Idle State:

Status light begins on green for 1 sec and turns off for 4 sec; all SOC power indicators are off.

Power On:

Open air switch's guard, toggle switch (red background of inspection window), and press Power for 1 to 2 sec to start system.

Power Off:

Status light and SOC power indicators are off.


Indicator light and button of BI PRO







Operation LED

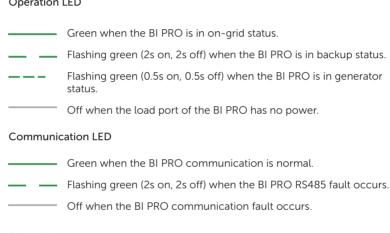



Fault LED

Red when relay fault or over temperature fault occurs. Flashing red (2s on, 2s off) when other fault occurs. Flashing red (0.5s on, 0.5s off) when BI PRO power button is off or Emergency stop fault occurs. Off if no Fault occurs.

Color and Status			Message Explanation	
Operation LED	Communication	Fault LED	- Message Explanation	
0.5s on, 0.5s off	0.5s on, 0.5s off	0.5s on, 0.5s off	Firmware upgrading	
OFF	OFF	OFF	Upgrade 0%-29%	
OFF	OFF	ON	Upgrade 30%-69%	_
OFF	ON	ON	Upgrade 70%-99%	Cycle
ON	ON	ON	Upgrade 100%	




BI PRO power button

When ON, the A1-ESS-G2 system can intelligently switch between on-grid and off-grid without human intervention.

When OFF, manual control of the BI PRO will be enabled when the internal relay is not switched automatically. When some unrecoverable failure is encountered, causing the system to stop running and the home load to lose power, the following operations can be performed:

- 1. Open the door of the BI PRO.
- 2.Turn off the breaker between the inverter and the BI PRO, as well as the breaker between the BI PRO and the generator.
- 3. Turn off the main breaker on the grid side.
- 4.Wait for 60s.
- 5. Press the BI PRO power button to enter manual maintenance mode.
- 6.Use the tool to turn the left and right relays to ON.
- 7. Turn on the main breaker to make the grid ready to power the home load.
- 8.Turn on the breaker between the inverter and the BI PRO to make the inverter run again.
- 9.Close the door of the BI PRO.

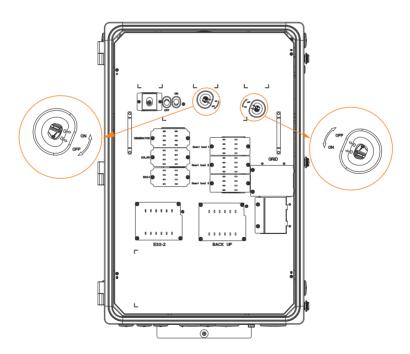

12 Troubleshooting

This section contains information and procedures for solving possible problems with A1-ESS-G2 system, and provides you with troubleshooting tips to identify and solve most problems that could occur with the system.

This section will help you narrow down the source of the problems you may encounter. Please read the following troubleshooting steps.

Check warnings or fault messages on the SolaXCloud. If a message is displayed, record it before doing anything further operation.

Troubleshooting for inverter

3			
Faults	Diagnosis and solution		
AFD Self Check • Please check if the AFDI module connects normally • Or contact SolaX Technical Support			
Arc Detect Fault	 DC Arc occurs or DC Arc Check Fault Please check if there is any visible arc vestige firstly Clear the PV input and solar battery board connects normally If Arc is detected five times in one hour, please manually clear Arc. Otherwise, it will re-connect to grid in five minutes 		
PV Conn Dir Fault	PV Reverse Connection Fault • Re-connect the PV correctly		
BAT Volt Fault	Battery Voltage Over high or Over low Fault Check if the battery input voltage is within the normal range Please contact SolaX Technical Support		
E-Stop Fault	Emergency stop Activated or Inverter Emergency Off		
BI Comm Fault	Communication Fault between Inverter and BI Check if the RS485 communication cable of BI connects to communication board of inverter. Please contact SolaX Technical Support		
Update File Fail	File Upgrade Fault Check if the file and the folder are correct Please contact SolaX Technical Support		

Faults	Diagnosis and solution
Udisk Update Fault	U Disk Upgrade Fault Check if the U disk is correctly plugged and the file is correct Please contact SolaX Technical Support
Meter Fault	Meter Communication Fault Check if the communication cable between inverter and BI connects normally or contact SolaX Technical Support
BMS_Lost	BMS Communication Lost Check the communication connection between the battery and the inverter Please contact SolaX Technical Support
Update Fault	Software Upgrade Fault Check if the communication cable between inverter and BI and re-upgrade the software Check the communication cable between control board and communication board and re-upgrade the software Check the communication cable between inverter and battery Or contact SolaX Technical Support
PV Volt Fault	PV Voltage Out of Normal Range Decrease the PV voltage Or contact SolaX Technical Support
DCI OCP Fault	DCI over current protection Fault • Please contact SolaX Technical Support
DCV OVP Fault	DCV EPS over voltage protection Fault • Please contact SolaX Technical Support
Bat Current Imbalance	The Firmware Fault of Battery Charge • Please contact SolaX Technical Support
Bat ConDir Fault	The Positive and Negative Pole of Battery Connected Reversely • Re-connect the battery
InvEEPROMFault	Inverter EEPROM Fault • Please contact SolaX Technical Support
EPSBatPowerLow	Battery Power Low in EPS Mode Turn off high power device and charge for the battery

Faults	Diagnosis and solution
EPS OverLoad Fault	Over Load in EPS Mode. • Turn off some device and clear the error
Grid Over Freq Fault	Grid Frequency Out of Range • System will reconnect if the utility is back to normal • Or please contact SolaX Technical Support
Grid Over Volt Fault	Grid Voltage Out of Range System will reconnect if the utility is back to normal Or please contact SolaX Technical Support
Grid Relay Fault	GIRD Relay Fault • Please contact SolaX Technical Support
Grid Under Freq Fault	Grid Frequency Out of Range System will reconnect if the utility is back to normal Or please contact SolaX Technical Support
Grid Under Volt Fault	Grid Voltage Out of Range • System will reconnect if the utility is back to normal • Or please contact SolaX Technical Support
Bus Volt Fault	Bus Voltage Out of Normal Range • Please contact SolaX Technical Support
Sample Fault	Gird Frequency or Voltage Sample Fault Please contact SolaX Technical Support
Inter Com Fault	Internal Communication Fault Check the connection between inverter and BI connects normally Or contact SolaX Technical Support
Isolation Fault	Isolation Fault Check if the insulation of electric wires are damaged or too wet Or contact SolaX Technical Support
Mgr EEPROM Fault	Manager EEPROM Fault • Please contact SolaX Technical Support
Other Device Fault	CPU Self-check Fault or Internal Flash Fault or RAM Fault • Please contact SolaX Technical Support

Faults	Diagnosis and solution
UnderTemp Fault	Temperature Below the Limitation or Temperature Sensor Fault • Please contact SolaX Technical Support
Over Temp Fault	Temperature over the limitation Check if the environment temperature is over limitation Check if the internal fan is fault Or contact SolaX Technical Support
RC OCP Fault	Leakage Current Fault Check if the insulation of electric wires are damaged or too wet Or contactSolaX Technical Support
Bat Break Open Fault	Battery Break Open Fault Check if the circuit break of battery is open.
Fan Fault	Inverter Internal Fan Fault • Please contact SolaX Technical Support
SW OCP Fault	Battery Charge and Discharge Over Current Fault or PV Over Current Fault or Inverter Over Current • Please contact SolaX Technical Support
RCD Fault	Residual Current Device Sensor Fault Please contact SolaX Technical Support
Rtc Fault	Rtc Fault • Please contact SolaX Technical Support
SoftVerFault	Program Write Fails or Incorrent Program Written in Re-write the program Or contact SolaX Technical Support
Grid Lost Fault	Grid Lost Fault System will reconnect if the utility is back to normal Check if the grid is normal
TZ Protect Fault	The Firmware of PV or Inverter or Battery Over Current Fault • Please contact SolaX Technical Support

Troubleshooting for battery

Faults	Diagnosis and solution
BMS_External_Err	Unable to establish communication with inverter.Restart BMSContact SolaX Technical Support
BMS_Internal_Err	Unable to establish communication among batteries. Restart BMS; Check if the connection among batteries is normal; Contact SolaX Technical Support
BMS_OverVoltage	Overvoltage of single battery. • Contact SolaX Technical Support
BMS_LowerVoltage	Undervoltage of single battery.Battery is forced to charge through inverter;Contact SolaX Technical Support
BMS_Charge OverCurrent	Overcurrent charging of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Discharge OverCurrent	Discharge overcurrent of BMS. Restart BMS; Contact SolaX Technical Support
BMS_TemHigh	The temperature of BMS is too high. Let BMS cool down to normal temperature and restart; Contact SolaX Technical Support
BMS_TemLow	The temperature of BMS is too low. • Warm up BMS and restart; • Contact SolaX Technical Support
BMS_CellImbalance	Inconsistency of battery. Restart BMS; Contact SolaX Technical Support
BMS_Hardware_ Protect	Hardware protection of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Circuit_Fault	Circuit fault of BMS. Restart BMS; Contact SolaX Technical Support

Faults	Diagnosis and solution
BMS_Insulation_Fault	Insulation fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_VoltSensor_Fault	Voltage sampling fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_TempSensor_Fault	Temperature sampling fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_TempSensor_Fault	Current sampling fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Relay_Fault	Relay contact adhesion fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Type_Unmatch	Different type of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Version_Unmatch	Different type of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Manufacturer_Unmatch	Different type of BMS. Restart BMS; Contact SolaX Technical Support
BMS_SW&HW_Unmatch	Different type of BMS. Restart BMS; Contact SolaX Technical Support
BMS_M&S_Unmatch	Different type of BMS. Restart BMS; Contact SolaX Technical Support

Troubleshooting

Faults	Diagnosis and solution
BMS_CR_Unresponsive	Inverter does not respond the charging request.Restart BMS or inverter;Contact SolaX Technical Support
S_Software_Protect	Software protection of battery module. Restart BMS; Contact SolaX Technical Support
BMS_536_Fault	BMS voltage sampling fault. Restart BMS; Contact SolaX Technical Support
BMS_Selfchecking_Fault	Self-test fault of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Tempdiff_Fault	BMS temperature varies greatly. Restart BMS; Contact SolaX Technical Support
BMS_Break	BMS sampling fault. Restart BMS; Contact SolaX Technical Support
BMS_Flash_Fault	External short circuit of BMS. Restart BMS; Contact SolaX Technical Support
BMS_Precharge_Fault	External short circuit of BMS. Check the external connection and restart BMS; Contact SolaX Technical Support
BMS_AirSwitch_Break	Disconnection of switch break of BMS. Restart BMS; Contact SolaX Technical Support

Troubleshooting for BI

Troubleshooting for br	
Faults	Diagnosis and solution
BI_InvCommFlt	CAN Communication Fault between BI and Inverter Check the communication cable between BI and inverter Please SolaX Technical Support
BI_E-Stop	Emergently switched off or Emergency stop activated
BI_ManualOverride	BI manual switch activatted
BI_GridRlyFlt	Grid Relay Fault • Please contact SolaX Technical Support
BI_OverTempFlt	Parallel Relay Fault • Please contact SolaX Technical Support
BI_AutoTxRlyFlt	Autotransformer Temperature High Check if two-phase imbalance is high in off-grid or ambient temperature is high Or please contact SolaX Technical Support
BI_PhsImblHigh	Two-phas with Load Imbalance High in Off-grid • Decrease the imbalance of two-phase with load in off-grid
BI_EEpromFlt	Internal EEPROM Read/Write Fault • Please contact SolaX Technical Support
BI_IntMeterFlt	Internal Meter Fault • Please contact SolaX Technical Support
BI_GenOverLoad	Generator Overload Fault
BI_GenRlyFlt	Generator Relay Fault • Please contact SolaX Technical Support
BI_VoltImbalanceFlt	Output Voltage Imbalance High in Off-grid Decrease the imbalance of two-phase with load in off-grid
BI_PrllRlyFlt	Parallel Relay Fault • Please contact SolaX Technical Support
BI_AutoTxRlyFlt	Transformer Relay Fault • Please contact SolaX Technical Support
BI_AmbTempHigh	BI Ambient Temperature High
BI_AmbTempLow	BI Ambient Temperature Low
BI_485CommFlt	RS485 Communication Fault between BI and Inverter • Check the RS485 communication cable between BI and Inverter • Please contact SolaX Technical Support

Troubleshooting

Faults	Diagnosis and solution
BI_OverTempFlt	Transformer Temperature High or Transformer with Load Imbalance in Off-grid Check if the imbalance is over high in off-grid Please contact SolaX Technical Support
BI_InvEngyLow	Battery Energy Low in Off-grid Detected
BI_GridLost	Grid Lost Detected
BI_GridVolHigh	Grid Voltage High Detected
BI_GridVolLow	Grid Voltage Low Detected
BI_GridFreHigh	Grid Frequency High Detected
BI_GridFreLow	Grid Frequency Low Detected
BI_GenLost	No Generator Detected
BI_GenVolHigh	Generator Voltage High Detected
BI_GenVolLow	Generator Voltage High Detected
BI_GenFreHigh	Generator Frequency High Detected
BI_GenFreLow	Generator Frequency Low Detected
BI_Fan1StopRotor	Fan 1 Stop Detected
BI_Fan2StopRotor	Fan 2 Stop Detected

13 Maintenance

Maintenance of battery

- If the ambient temperature for storage is -4°F~122°F/-20°C~50°C, recharge the batteries at least once every 3 months.
- If the ambient temperature for storage is $32^{\circ}F\sim104^{\circ}F/0^{\circ}C\sim40^{\circ}C$, recharge the batteries at least once every 12 months.
- If the battery(ies) has(have) not been used for more than 9 months, the battery(ies) must be charged to at least SOC 50 % each time.
- For the first installation, the interval among manufacture dates of batteries shall not exceed 3 months.
- If one of the batteries is replaced, the SOC of the battery after replacement shall be consistent with those of batteries that have not been replaced, with the maximum difference of between -5% and 5%.
- If users want to increase their battery system capacity, please ensure that the SOC of the
 existing system capacity is about 40%. The manufacture date of the new battery shall
 not exceed 6 months; in case of exceeding 6 months, please charge the new battery to
 around 40%.


Dismantling the battery

NOTICE

- Before dismantling the battery, make sure you have shut down the battery system.
- If the BAT cables will be reused after disconnecting, please reinstall and secure the buckles back onto these cables first before reconnecting them. For details, see step 2.
- The arrow direction on the buckle indicates the vertical direction of the groove.


Step 1: Disconnect the cables between BMS and the inverter.

- (1) Unscrew the communication cable from the BMS port.
- (2) Find the overall position of the groove according to the buckle arrow, place a flat-head screwdriver on the groove at either left or right side of the buckle, and then pry open the buckles fastened on BAT+ and BAT- cables.

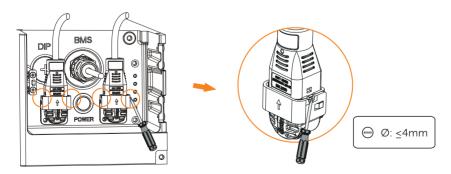

Step 2: (Optional) Reinstall and secure the buckles to the BAT cables. (1) Align the curve of the cable head to that of the buckle, and then stick the cable head into the buckle base.

(2) Align the buckle cover to the buckle base, and then press the cover down to lock it until a "click" sound is heard.

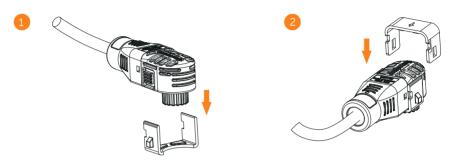

Step 3: Disconnect the series wiring terminal on the battery.

Step 4: Disconnect the rest cables.

Maintenance of inverter

Regular maintenance is required for the inverter.


The table below lists the operational maintenance for expressing the optimum device performance. More frequent maintenance service is needed in the worse work environment. Please make records of the maintenance.

Item	Check Note	Maintenance Interval
		aco intervat
Indicators / button	Check if the indicators and button of the inverter are in normal state	Every 6 months
Wires	Check that if the input and output wires are damaged or aged.	Every 6 months
DC switch	By operating the switch a few times (5x), the contacts will clean themselves and the switch will have a longer life.	/
Signs	Check the installation for signs of overload, overheating, and that the terminals do not exceed the limit of 167°F/75°C under full load.	/


Maintenance of BI PRO

The internal fan of BI PRO needs to be replaced when BI PRO prompts fan error. The replacement of fan shall be performed by professional electricians. Before replacement, make sure all the power of BI PRO is switched off.

Step 1: First open the outer cover of BI PRO.

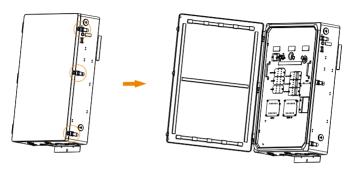


Step 2: Unscrew the seven M4 screws below with crosshead screw driver to disassemble the internal cover of BI PRO.

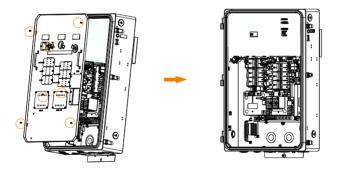

Step 3: Disconnect the fan cable, and unscrew the two M4 screws to disassemble the fan (pull out the fan).

 Please note that the fan cable is locked on the BI PRO. Pinch and hold the buckle on the cable terminal to disconnect it.



Before After

14 Commission the System

Step 1: Scan the QR code below to download SolaXCloud APP. You can also find the QR code at www.solaxcloud.com.




NOTICE

• The screenshots in this chapter correspond to the SolaXCloud App V6.0.4.

Step 2: Create a new account:

a) Touch Sign up to start the registration.

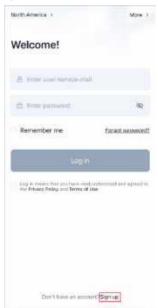



Confirm

b) Select your Country/Region and Server, then touch Confirm.

c) Select your identity type and touch Next.



d) Fill in the information as shown in the picture below, then tick Log in means that you have read, understood and agreed to the Privacy Policy and Terms of Use. Then touch Sign up.



Step 3: Log in.


Open the SolaXCloud APP, enter your user name and password, then tick Log in means that you have read, understood and agreed to the Privacy Policy and Terms of Use. Then tick Log in to enter.

It will be directly log in your account next time if you tick the **Remember me**. Touch the **Forgot password** to refresh password through your E-mail.



Appendix A: Wiring and Breaker Requirement

Inverter wiring

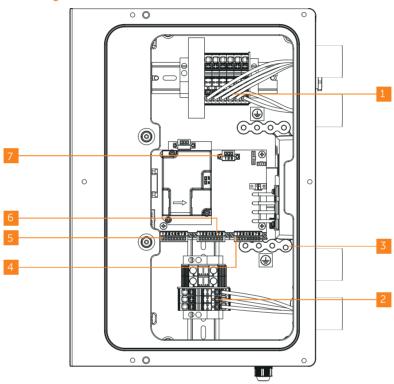


Inverter power terminal (Purchased by customer)

No.	Terminals	Туре	Cross-sectional Area Range	Strip Length
1	PV terminals	90°C(194°F), 600 V, copper	10-8 AWG	0.47 in / 12 mm
2	AC terminals	90°C(194°F), 600 V, copper	12-8 AWG(3.8 kW), 10-8 AWG(5/6/7.6 kW)	0.47 in / 12 mm
3	Ground terminals	90°C(194°F), 600 V, copper	8 AWG	0.47 in / 12 mm

Inverter communication terminal (Purchased by customer)

No.	Terminals	Port Pin	Туре	Range	Strip Length	Torque (in-lbs)
	Pin 1: RS485_METER_A	CAT5 or				
		Pin 2: RS485_METER_B	better	_		1.8
		Pin 3: GND				
4	AUX	Pin 4: +12V_RELAY_OUT		24-18	0.24 in /	
4	terminal	Pin 5: DRM0		AWG	6 mm	
		Pin 6: +12V_COM	7			
		Pin 7: STOP_NO+				
		Pin 8: STOP_NO-				
		Pin 1: SYSR_L				
		Pin 2: SYSR_H		24-18 AWG		
		Pin 3: CAN_L	CAT5 or		0.24 in / 6 mm	1.8
_	COMM in	Pin 4: CAN_H	better			
5	terminal	Pin 5: RS485_BI_A				
		Pin 6: RS485_BI_B				
		Pin 7: +12V	- /	18-16		
		Pin 8: GND		AWG		
		Pin 1: SYSR_L		24-18 AWG	0.24 in / 6 mm	1.8
		Pin 2: SYSR_H				
		Pin 3: CAN_L	CAT5 or			
_	COMM out	Pin 4: CAN_H	better			
6	terminal	Pin 5: RS485_BI_A				
		Pin 6: RS485_BI_B				
		Pin 7: +12V	- /	18-16 AWG		
		Pin 8: GND				
		Pin 1: GND	CAT5 or better	24-18 AWG	0.24 in / 6 mm	1.8
7	MLPE terminal	Pin 2: RS485_MLPE_A				
terriiriat		Pin 3: RS485_MLPE_B				

BI PRO wiring

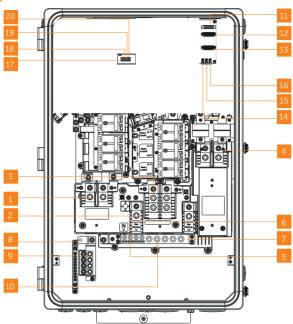

BI PRO power terminal required wire sizes and torques

No.	Terminals	Cross-sectional Area Range	Strip Length	Torque (in-lbs)	Tool
1	ESS 2 lugs	4-4/0 AWG	1.0 in / 25 mm	275	5/16 HEX Key
2	Non-Backup Load lugs	4-4/0 AWG	1.0 in / 25 mm	275	5/16 HEX Key
3	Backup Load lugs	4-4/0 AWG	1.0 in / 25 mm	275	5/16 HEX Key
4	Grid terminals	4-4/0 AWG	1.0 in / 25 mm	275	5/16 HEX Key
5	Neutral terminals small hole	14-4 AWG	0.40 in / 10 mm	26	1.0*5.0 mm Slotted
6	Neutral terminals medium hole	14-4 AWG 2-2/0 AWG	1.0 in / 25 mm	26 110	3/16 HEX Key
7	Neutral terminals large hole	4-4/0 AWG	1.0 in / 25 mm	275	5/16 HEX Key
8	Ground terminals small hole	14-4 AWG	0.40 in / 10 mm	26	1.0*5.0 mm Slotted
9	Ground terminals large hole	6-2/0 AWG	0.70 in / 17 mm	110	3/16 HEX Key
10	M6 Nuts on Bus Bar (Secure Breakers or Lugs on Smart Load Module)	1	1	45	10 mm HEX Socket

BI PRO communication terminal (Purchased by customer)

No.	Terminals	Port Pin	Туре	Range	Strip Length	Torque (in-lbs)
11	INV Communication terminal	Pin 1: RESERVE		24-18 AWG	0.24 in / 6 mm	1.8 lbf.in / 0.2 N·m
		Pin 2: RESERVE				
		Pin 3: CAN_L	CAT5 or better			
		Pin 4: CAN_H				
		Pin 5: RS485_BI_A				
		Pin 6: RS485_BI_B				
		Pin 7: +12 V	/	18-16 AWG		
		Pin 8: GND	- /			
12	AUX1 terminal	Pin 1: DRY_GEN	. /	24-16 AWG		1.8 lbf.in / 0.2 N·m
		Pin 2: GND_GEN	- /			
		Pin 3: RS485_RESERVE_A	CAT5 or			
		Pin 4: RS485_RESERVE_B	better		0.24 in /	
12		Pin 5: RESERVE		24-18	6 mm	
		Pin 6: RESERVE		AWG		
		Pin 7: STOP_NO+				
		Pin 8: STOP_NO-				
	AUX2 terminal	Pin 1: NO_1	- - - / -	24-16 AWG	0.24 in / 6 mm	1.8 lbf.in / 0.2 N·m
		Pin 2: COM_1				
		Pin 3: NC_1				
13		Pin 4: NO_2				
13		Pin 5: CON_2/3				
		Pin 6: NC_2				
		Pin 7: NO_3				
		Pin 8: NC_3				
14	CT1 terminal	Pin 1: CT1+	Shielded, twisted pair	/	/	/
		Pin 2: CT1-				
15	CT2 terminal	Pin 1: CT2+	Shielded,	/	1	/
15		Pin 2: CT2-	twisted pair			
16	CT3 terminal	Pin 1: CT3+	Shielded, twisted pair	/	/	/
16		Pin 2: CT3-				

BI PRO communication terminal (Purchased by customer)

No.	Terminals	Port Pin	Туре	Range	Strip Length	Torque (in-lbs)
17 CT L1A termina	CT I 1A terminal	Pin 1: CT L1A+	Shielded, twisted pair	,	,	/
	CT LIA terminat	Pin 2: CT L1A-		/	/	
18	CT L1B terminal	Pin 1: CT L1B+	Shielded, twisted pair	/	,	1
		Pin 2: CT L1B-			/	
19 CT L2A termina	CT L2A terminal	Pin 1: CT L2A+	Shielded, twisted pair	,	/	1
	CT LZA terminat	Pin 2: CT L2A-		/		
20	CT L2B terminal	Pin 1: CT L2B+	Shielded,	,	,	1
		Pin 2: CT L2B-	twisted pair	/	/	1

BI PRO breaker and switch (Purchased by customer)

Main Breaker	Branch Breaker	Then the maximum short circuit rating in RMS symmetrical amperes, 240V is:	
When the panelboard service disconnect is a Type:	And the branch breakers installed are Type:		
EATON CSR	EATON BR BRAF BRH BD BQ.	22,000 A	


Main Breaker Line side barriers: EatonTlCSR300.

Hold down kit: Eaton BRHDK125.


Component	Description
Emergency stop switch	Normally closed (NC) contact The UL certification is required for the emergency stop switch.

Appendix B: Emergency Stop Connection Steps

 
For installing Emergency Stop on the inverter, follow the below installation instructions. **Step 1:** Remove the factory-installed jumper from Pin 7 and 8 of the 8-position "AUX" connector inside the inverter.



Step 2: Use minimum 24 AWG conductors to connect Pin 7 and Pin 8 (labeled "12V" and "STOP_NO") to a suitable emergency stop switch.

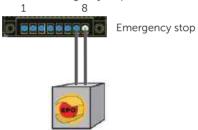


Appendix C: Meter Y Connection Diagram

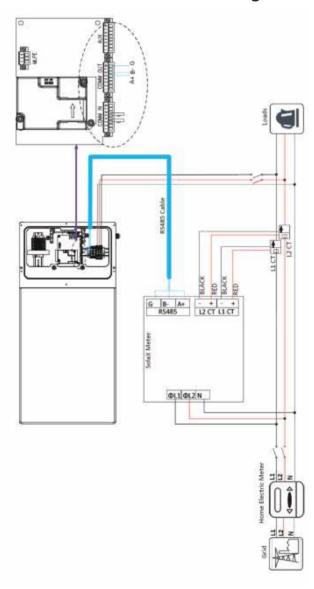



Appendix D: System Wiring Diagram

1 Whole home backup solution

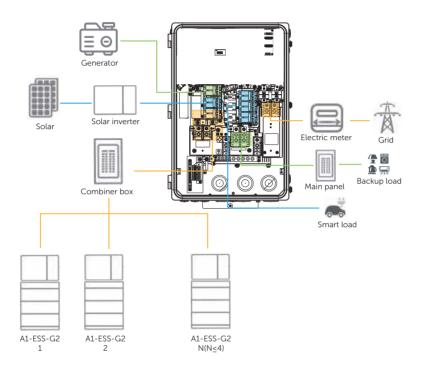

2 Partial home backup solution

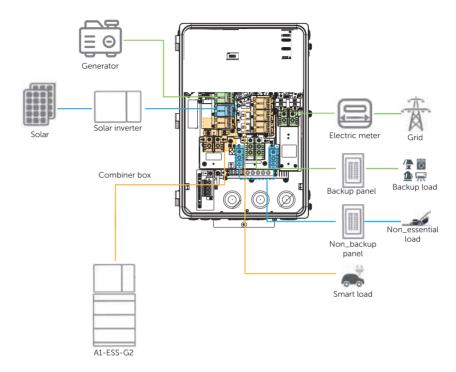

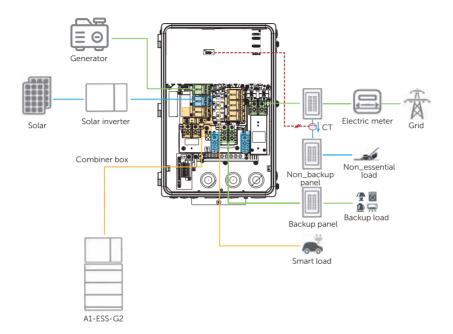

Contact Information



+1 (888) 820-9011

service.us@solaxpower.com



SolaX Power Network Technology (Zhejiang) Co., Ltd.

Add.: No. 278, Shizhu Road, Chengnan Sub-district, Tonglu County,

Hangzhou, Zhejiang, China E-mail: info@solaxpower.com

